



PROFESSIONAL MONITOR RECEIVER

AR-3000A

SERVICE MANUAL



FRONT BPF RF AMP UNIT

Mechanical relay selects two attenuators for below 30MHz/20dB or beyond 30MHz/10dB frequency ranges. For below 30MHz, three BPFs, one LPF and one RF amplifier are prepared by bipolar transistor 2SC3356. For beyond 30MHz, seven BPFs, one HPF and two RF amplifiers are prepared by combination of transistor 2SC3585/FET 2SK571. All necessary switchings are automatically controlled by CPU in CPU-LCD UNIT.

MAIN UNIT

Diode package HP-5082-2831 along with two transformers works as DBM(double balanced mixer) and the first mixer of the AR3000A. The first IF amplifier AGC controlled by transistor 2SC3585 is provided for all signals, and then three BPFs for different IF frequencies follow. BPF for 736.23MHz is for the lowend and the highend receiving bands, and followed by similar DBM second mixer and the second IF amplifier which is AGC controlled by transistor 2SC2759. BPF for 352.23MHz is for 500-940MHz and 1300-1650MHz receiving bands and followed by transistor second mixer by 2SC2759. BPF for 198.63MHz is for 940-1300MHz receiving band and followed by transistor second mixer by 2SC2759, as well. All injection carriers of four kinds are supplied by PLL 2nd OSC UNIT. All signals are now converted to same 45.0275MHz, and it passes through crystal filter for all modes except WFM mode. In WFM mode, 45.0275MHz signal is mixed with 34.33MHz crystal oscillator to make 10.7MHz IF frequency for the ceramic filter SFT10.7-MS2-A with proper bandwidth for WFM mode. 10.7MHz signal is mixed again with same 34.33MHz crystal oscillator to recover 45.0275MHz. For two mixers, diode package of MD487C1-3R along with RF transformers are used. Two stage of IF amplifiers, one for 10.7MHz and one for 45.0275MHz, are provided to compensate losses through filter and two passive mixers. Filtered 45.0275MHz signal is amplified again in Q14 45.0275MHz amplifier by transistor 2SC2759, and then enters into IC-1 MC3357 combination chip for the third mixer, VCXO(voltage controlled crystal oscillator), FM IF amplifier, FM detector, squelch noise amplifier and squelch control. VCXO oscillates 44.575-44.565MHz, varying 10KHz in required frequency steps(the finest 50Hz for SSB tuning) which is controlled by D-A converter under control of CPU. Converted 455KHz signal passes through three kind IF filters selected by its mode, then buffered and re-enters into MC3357 IC for FM detection and squelch control. Ceramic filter CFJ455K for SSB/CW 2.4KHz, CFZM455F for NFM/AM and RF tuned coil for WFM 70KHz are provided. For AM/SSB/CW, separate IF amplifier is provided to follow AGC/AM detector and product detector for SSB/CW. Stable crystal beat oscillator for 453.5/456.5KHz injects appropriate carrier according to required side band receiving.

MAINTENANCE

COVER REMOVAL

Remove the two screws near the rubber feet on the bottom of the AR3000A. Remove four screws of the back side of the case. Remove the lower case by pulling down and then lift upward the back wall of the upper case and pull backward to remove the upper case.

TEST EQUIPMENT REQUIRED

Following is a list of test equipments recommended for maintenance of this receiver.

1. DC power supply well regulated 12V 1Ampere capacity.
2. DC volt meter
3. AC volt meter
4. SINAD meter
5. Oscilloscope with 10MHz response
6. Frequency counter with 1300MHz response and -20dBm sensitivity
7. Signal Generator with range of 455kHz to 2300MHz preferable.
S.G. with 1000MHz range can be used for extra range as one half frequency generator calibrated with a spectrum analyzer.
8. Spectrum analyzer with 2300MHz response
9. Tracking generator with 2300MHz response
10. Distortion meter

ALIGNMENT AND CALIBRATION

It is not necessary to align a new receiver. Each receiver is carefully aligned and checked by our expert technicians before it is forwarded from the factory.

If it comes necessary to align any of the units in the AR3000A receiver, proceed as follows:

FRONT END BPF RF AMP ALIGNMENT

No alignment required for up to BAND #6(50-108MHz) as fixed value inductors & capacitors are included.

For more than BAND #7(108-136MHz), critical alignment can be made when specified equipments mentioned above are available. Never try to align or adjust inductors/capacitors without above mentioned equipments.

1. Bias adjustment required prior to BPF alignment.
Three potentiometers VR1, 2 & 3 are on the front end board. Adjust these potentiometers as follow:

VR1: Set receiving frequency of the receiver at any point in 30-940MHz range(BAND #5-12). Connect DC voltmeter at drain of Q19 2SK571 and adjust VR1 to get 3.6V DC.
VR2: Set receiving frequency of the receiver at any point in 940-2036MHz range(BAND #13). Connect DC voltmeter at drain of Q2 2SK571 and adjust VR2 to get 3.1V DC.
VR3: Set receiving frequency of the receiver at any point in 940-2036MHz range(BAND #13). Connect DC voltmeter at drain of Q3 2SK571 and adjust VR3 to get 3.1V DC.


For above adjustment, step frequency & mode of the receiver are not important.

2. For BAND #1 through BAND #6, no adjustment parts existed but if it is necessary to confirm passband characteristics, check it by spectrum analyzer and tracking generator as follow:


Connect output of tracking generator to antenna input of the AR3000A and input of spectrum analyzer to J-4(output terminal) of front BPF RF AMP board.

Characteristics of each band should be similar as follows:

BAND #1 (100-500KHz) L.P.F.

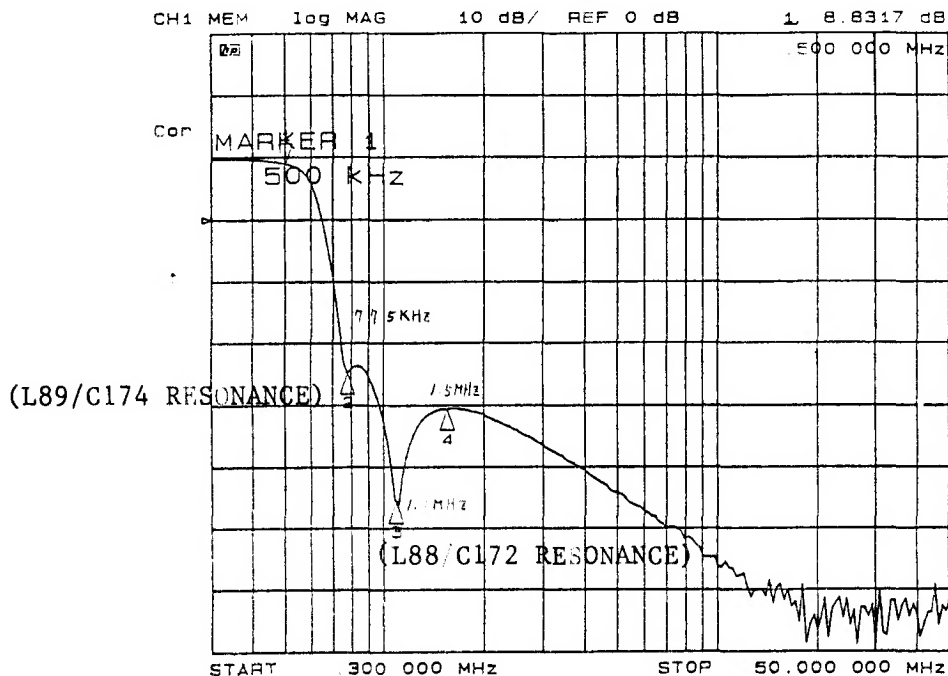


BAND #2 (500-2500KHz) B.P.F.

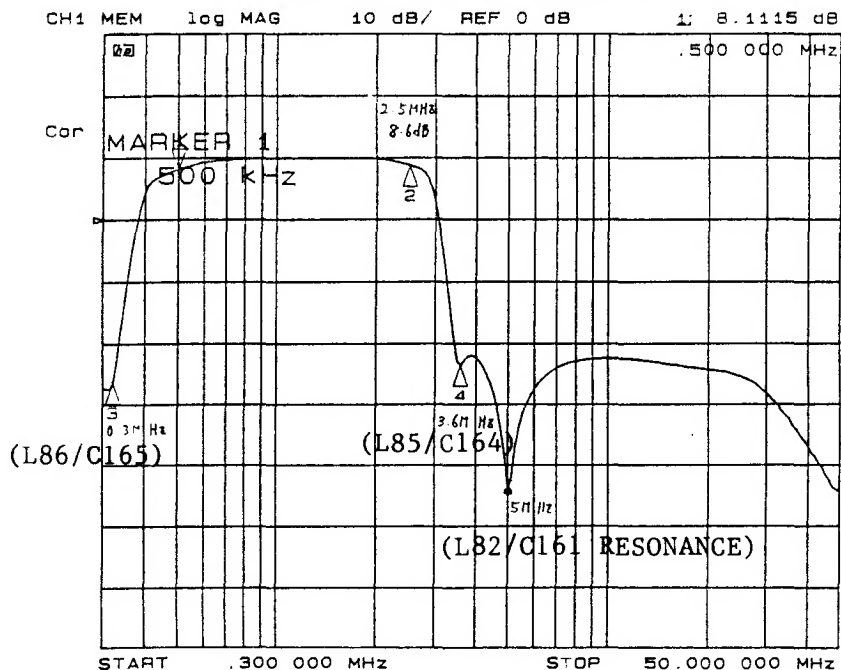


By three resonators L81/C160, L84/C163, L87/C166 confirm the most flat and high response of the Band Pass Filter.


BAND #3 (2.5-10MHz) B.P.F.

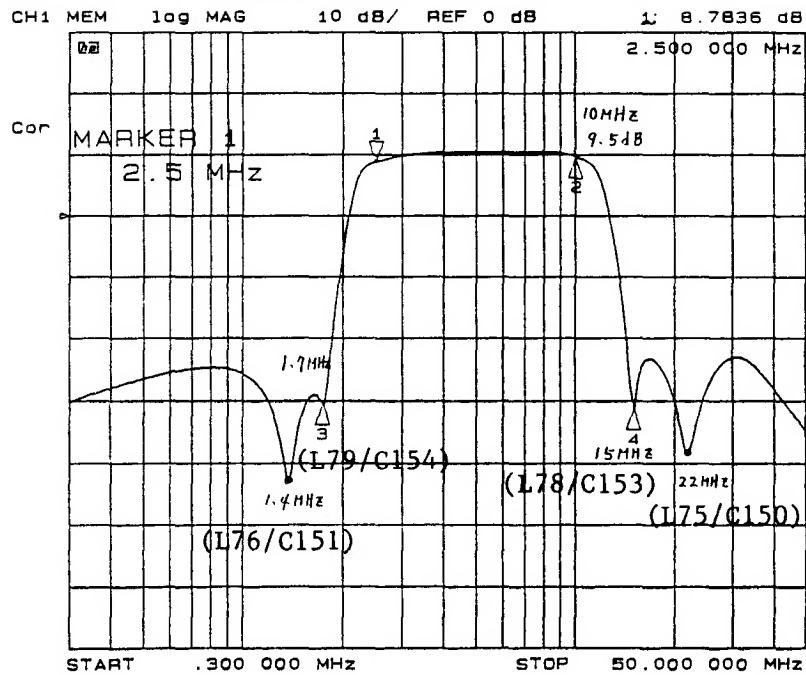


BAND #4 (10-30MHz) B.P.F.

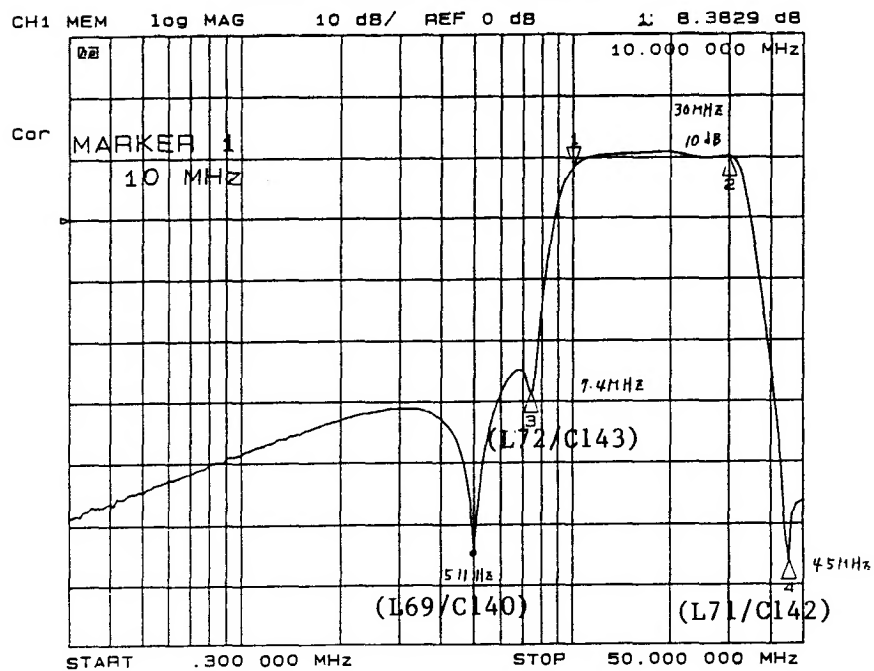

BAND #5 (30-50MHz) B.P.F.

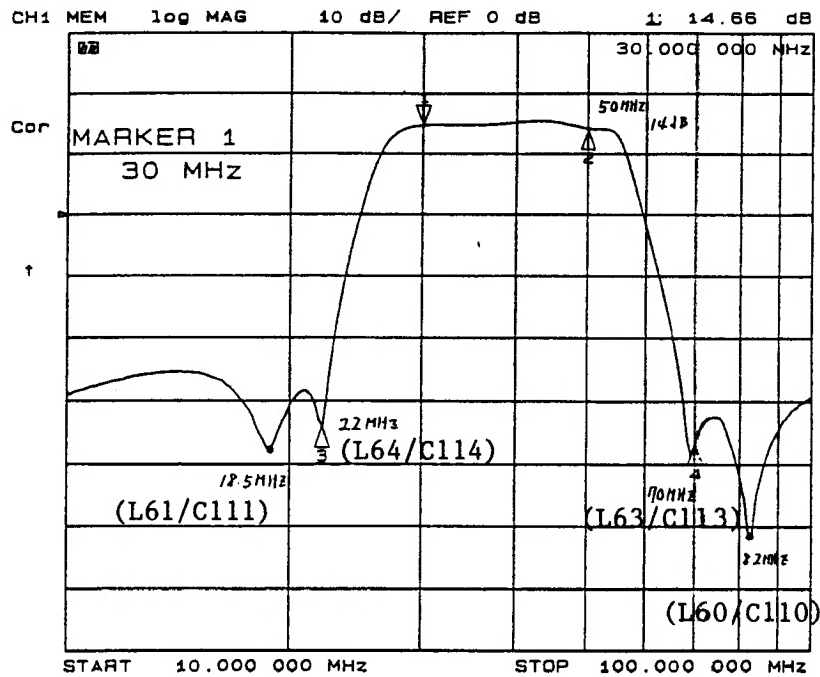


BAND #6 (50-108MHz) B.P.F.

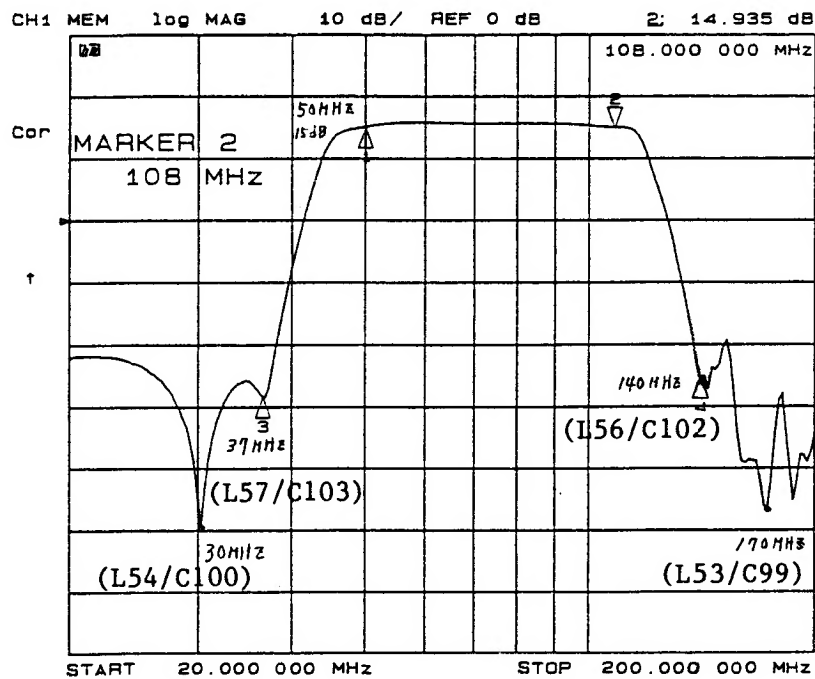


For BAND #7 through #13, following adjustments are proceeded if necessary.

BAND #7 (108-136MHz) B.P.F.

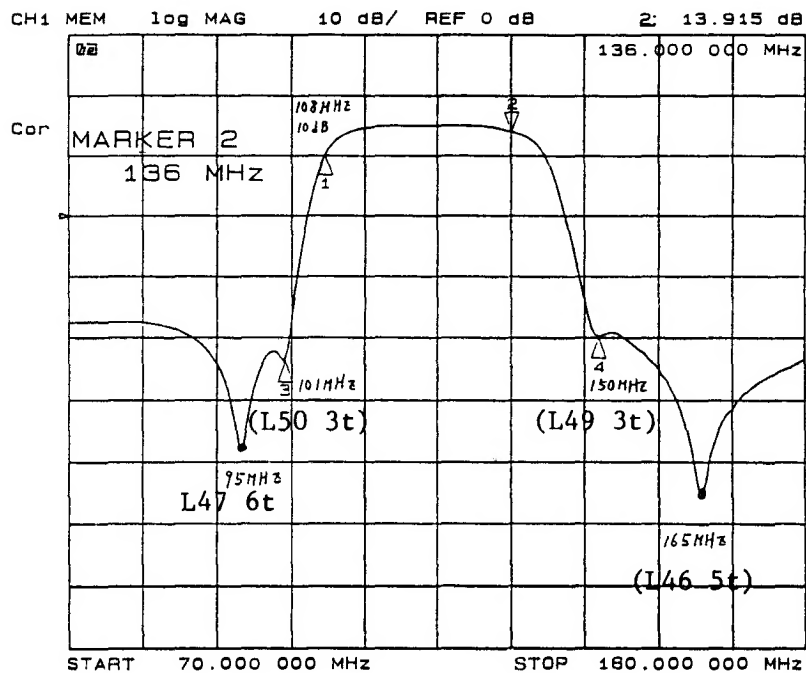


Adjust four coils L46,47,49 & 50 for 165, 95, 150 & 101MHz respectively. Then adjust coils L45, 48 & 51 for the most flat response.

BAND #8 (137-174MHz) B.P.F.

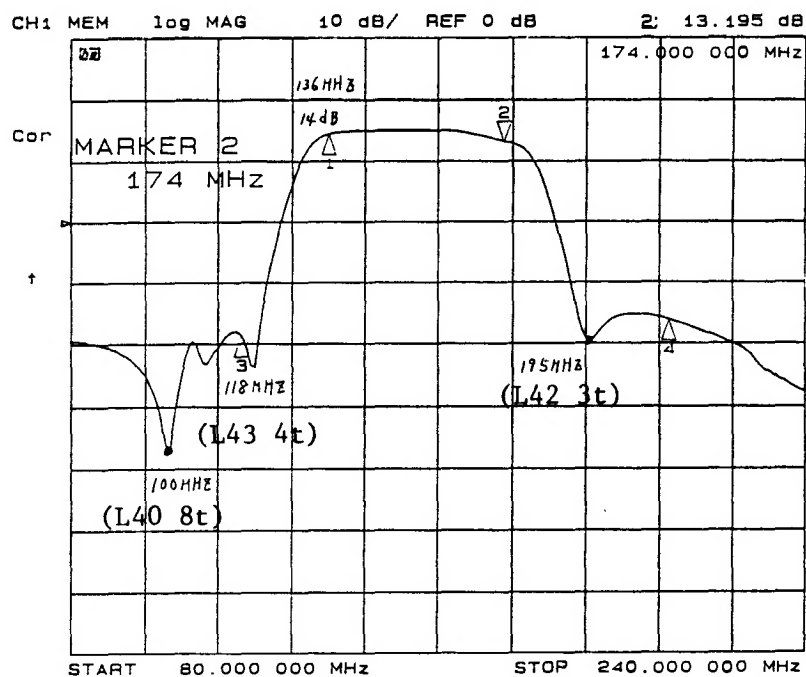


Adjust three coils L40, 42 & 43 for 100, 195 & 118MHz respectively. Then adjust L41 2t for the most flat response.

BAND #9 (174-224MHz) B.P.F.

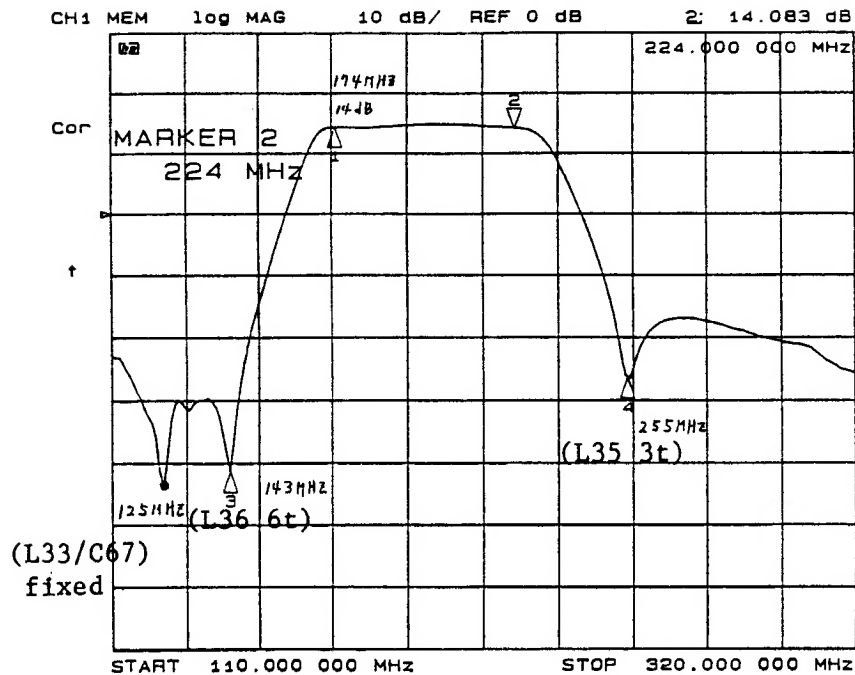


Adjust two coils L35 & 36 for 255 & 143MHz respectively.
Then adjust L34 2t for the most flat response.

BAND #10 (224-335MHz) B.P.F.

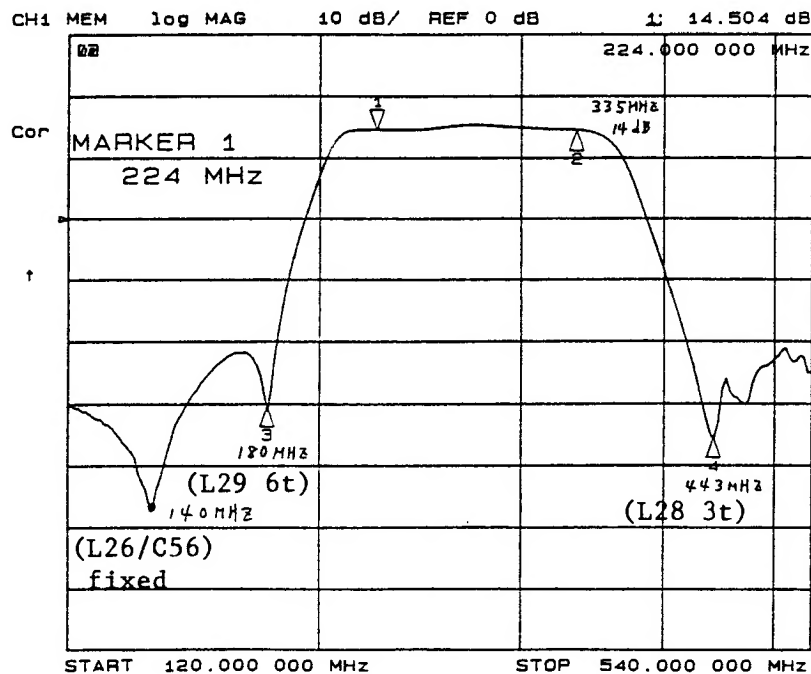

Adjust two coils L28 & 29 for 443 & 180MHz respectively.
No adjustment for pass band as L16, 19 & 22 are fixed value.

BAND #13 (940-2036MHz) H.P.F.

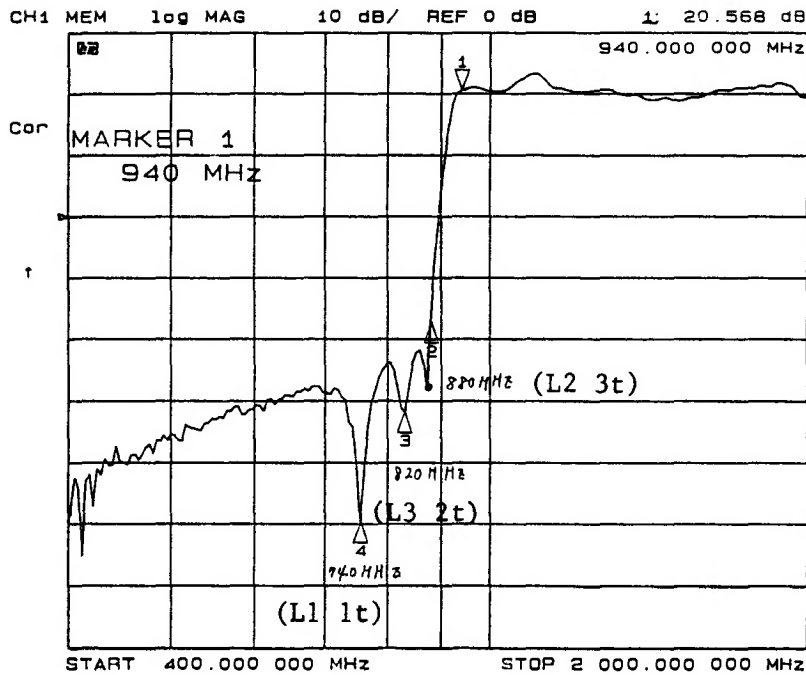

Adjust three coils L1, 2 & 3 for 740, 880 & 820MHz respectively.
Then adjust L4 1t for the most flta response.

PLL 2ND OSC UNIT ALIGNMENT


1. MASTER OSCILLATOR ADJUSTMENT (12.8MHz CRYSTAL OSCILLATOR)
Set the AR3000A as follow and connect the frequency counter at J10 of the MAIN UNIT.
STEP: 50Hz, MODE: AM/NFM/WFM, FREQUENCY: 2036.000MHz
Adjust TC-1 trimmer capacitor carefully to get precise frequency of 1299.7800MHz on the counter
Remove the frequency counter and check the RF level of +3dBm to +8dBm at J10 connector by the spectrum analyzer.
2. 153.600MHz INJECTION
Set the AR3000A as follow and connect the frequency counter and the spectrum analyzer at J4 of MAIN UNIT.
STEP: 50Hz, MODE: AM/NFM/WFM, FREQUENCY: 940.000 - 1299.99995MHz
Then adjust trimmer capacitors TC2,3,4,5,6 & 7 to get 153.600MHz and RF level of -3dBm to 0 dBm.
3. 307.200MHz INJECTION
Set the AR3000A as follow and connect the frequency counter and the spectrum analyzer at J5 of MAIN UNIT.
STEP: 50Hz, MODE: AM/NFM/WFM, FREQUENCY: 500.000 - 939.99995MHz
Then adjust trimmer capacitors TC8 & 9 to get 307.200MHz and RF level of -3dBm to 0 dBm.
4. 691.200MHz INJECTION
Set the AR3000A as follow and connect the frequency counter and the spectrum analyzer at J11 of MAIN UNIT.
STEP: 50Hz, MODE: AM/NFM/WFM, FREQUENCY: 0.1000 - 499.99995MHz
Then adjust trimmer capacitors TC10,11,12,13,14 & 15 to get 691.200MHz and RF level of -3dBm to 0dBm.

MAIN UNIT ALIGNMENT

1. VCXO ADJUSTMENT (44.575MHz)

*Special made pick-up coil (airwound 7 turn 10mm diameter by 1.2mm ϕ enamel coated copper wire soldered directly to BNC socket) and

*Tuned amplifier (44.570MHz tuned three stage amplifier, gain 50dB) are required for this adjustment.

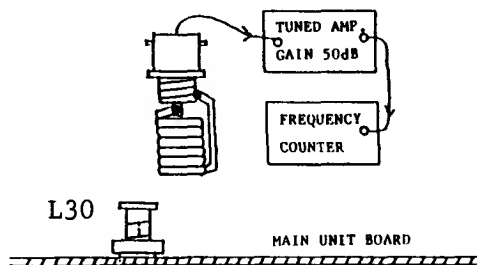

Set the pick-up coil near to L30 coil on the AR3000A board shown as above illustration. Loose coupling to avoid frequency change is required. Connect coaxial cable with BNC plugs to the pick-up coil and other end of the cable to input of tuned amplifier. Connect frequency counter to output of 50dB gain tuned amplifier.

Set the AR3000A at 939.99200MHz, STEP ADJ 6kHz, AM or NFM or WFM, adjust L30 slug core for 44.5730MHz +200Hz -0Hz on the counter.


Change the frequency to 939.99800MHz, adjust VR1 potentiometer near L30 for 44.5670MHz +200Hz -0Hz.

Above two processes interact each other and repeat several times until no more improvement is obtained.

2. SSB CRYSTAL ADJUSTMENT (453.50/456.50kHz)

Special pick-up coil and tuned 50dB gain amplifier are required for this adjustment. Pick-up coil as same as above except cold end is open not soldered to ground side of BNC connector.

Tuned two stage amplifier of total gain of approx. 50dB.

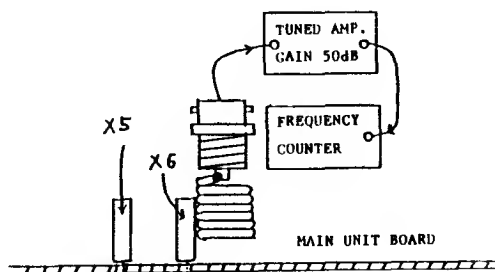


Set the pick-up coil with coaxial cable near to X6 crystal unit shown as above illustration. (same position for two trimmer caps.)

Set the AR3000A at any of 0.1000-939.99995MHz, STEP 50Hz,
MODE LSB, adjust TC9 trimmer capacitor to get 453.50kHz+200Hz-0Hz.
MODE USB, adjust TC10 " " 456.50kHz+200Hz-0Hz.

3. MCF (MONOLITHIC CRYSTAL FILTER) ADJUSTMENT

Set the receiver STEP for 50Hz, MODE for AM or NFM, FREQUENCY 0.1000 - 499.9995MHz. Connect output of the tracking generator through 1000PF capacitor to base of Q2 2SC2759 and the spectrum analyzer at pin #16 of IC1 MC3357 through 1000PF capacitor. Adjust ferrite cores of transformers L7, 19 & 20 to get flat and highest response as shown below.


Output level of the tracking generator: -50dBm

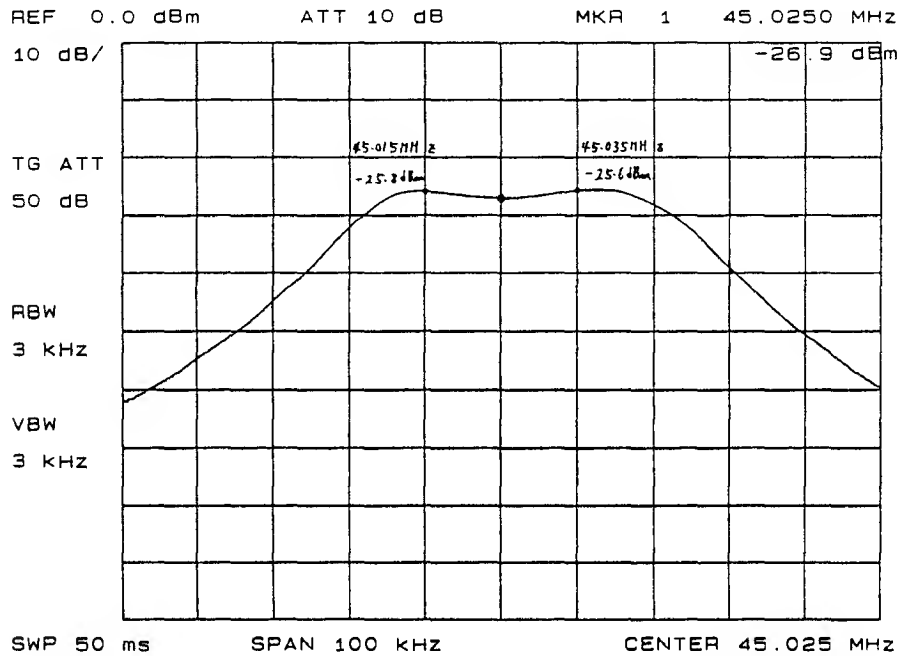

Change receiving frequency to 500.000 - 939.99995MHz and output of the tracking generator to emitter of Q4 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L14 to get flat and highest response as shown below.


Output level of the tracking generator: -30dBm

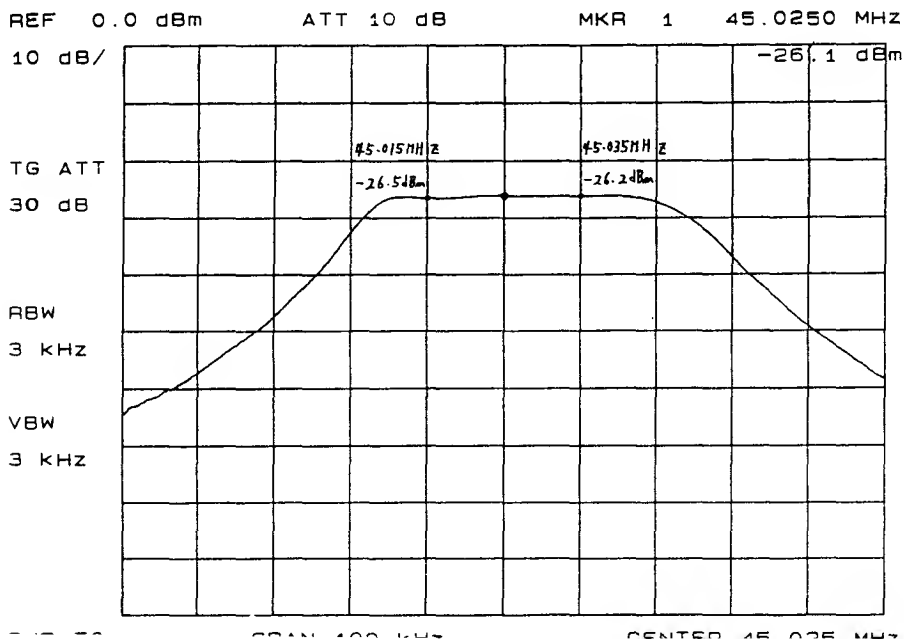

3. MCF (MONOLITHIC CRYSTAL FILTER) ADJUSTMENT

Set the receiver STEP for 50Hz, MODE for AM or NFM, FREQUENCY 0.1000 - 499.9995MHz. Connect output of the tracking generator through 1000PF capacitor to base of Q2 2SC2759 and the spectrum analyzer at pin #16 of IC1 MC3357 through 1000PF capacitor. Adjust ferrite cores of transformers L7, 19 & 20 to get flat and highest response as shown below.


Output level of the tracking generator: -50dBm

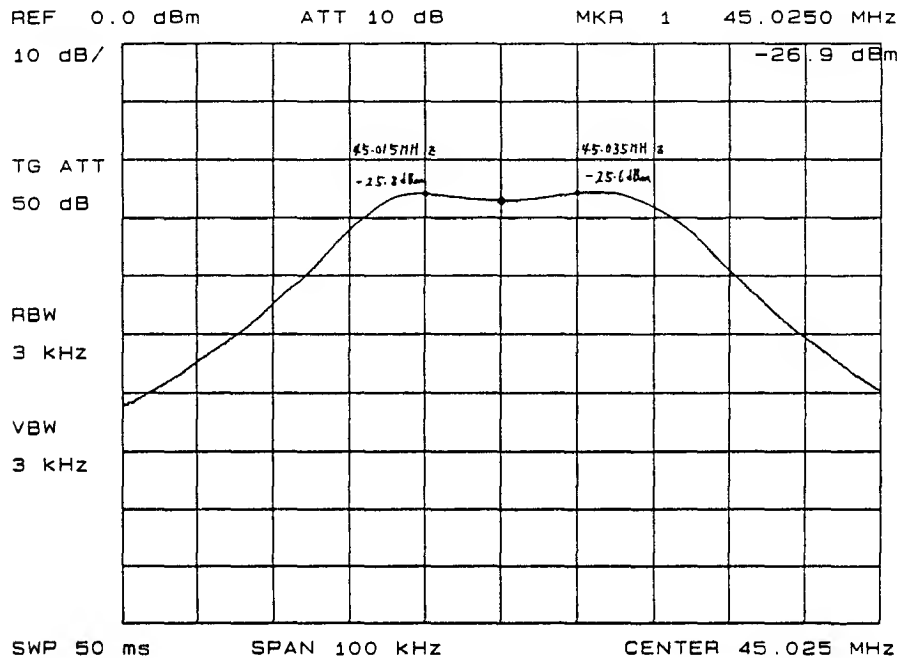

Change receiving frequency to 500.000 - 939.99995MHz and output of the tracking generator to emitter of Q4 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L14 to get flat and highest response as shown below.


Output level of the tracking generator: -30dBm

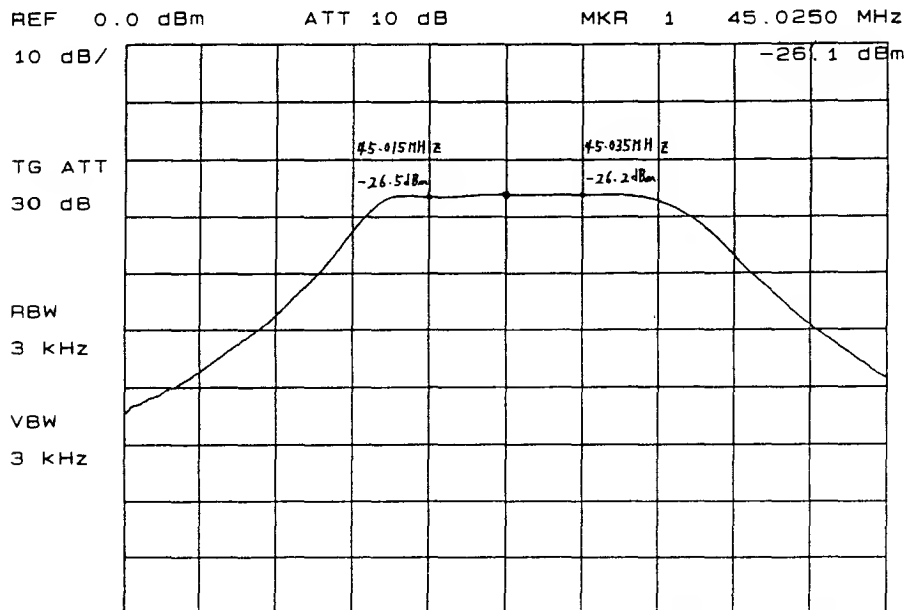

3. MCF (MONOLITHIC CRYSTAL FILTER) ADJUSTMENT

Set the receiver STEP for 50Hz, MODE for AM or NFM, FREQUENCY 0.1000 - 499.9995MHz. Connect output of the tracking generator through 1000PF capacitor to base of Q2 2SC2759 and the spectrum analyzer at pin #16 of IC1 MC3357 through 1000PF capacitor. Adjust ferrite cores of transformers L7, 19 & 20 to get flat and highest response as shown below.


Output level of the tracking generator: -50dBm

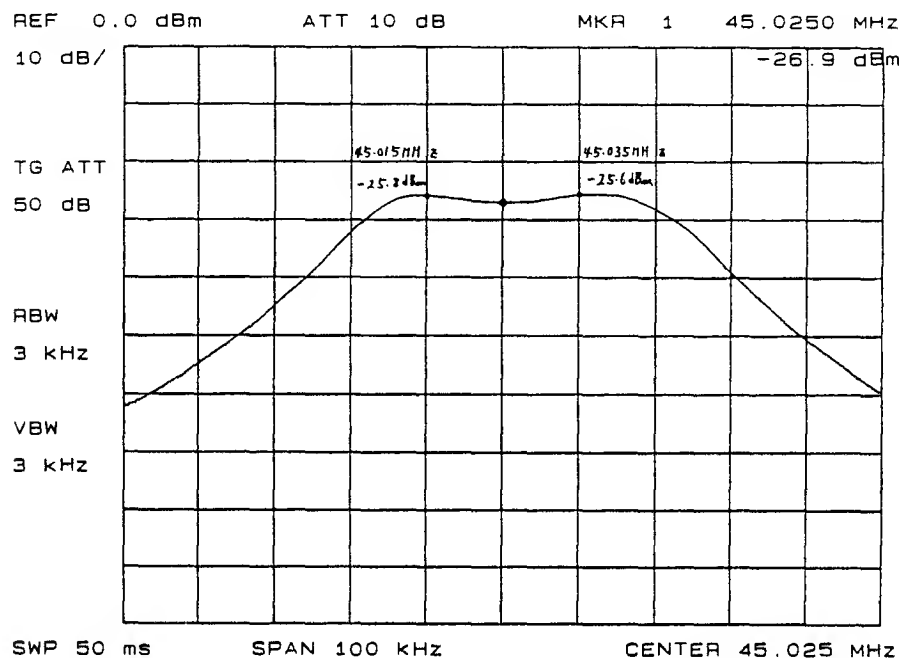

Change receiving frequency to 500.000 - 939.99995MHz and output of the tracking generator to emitter of Q4 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L14 to get flat and highest response as shown below.


Output level of the tracking generator: -30dBm

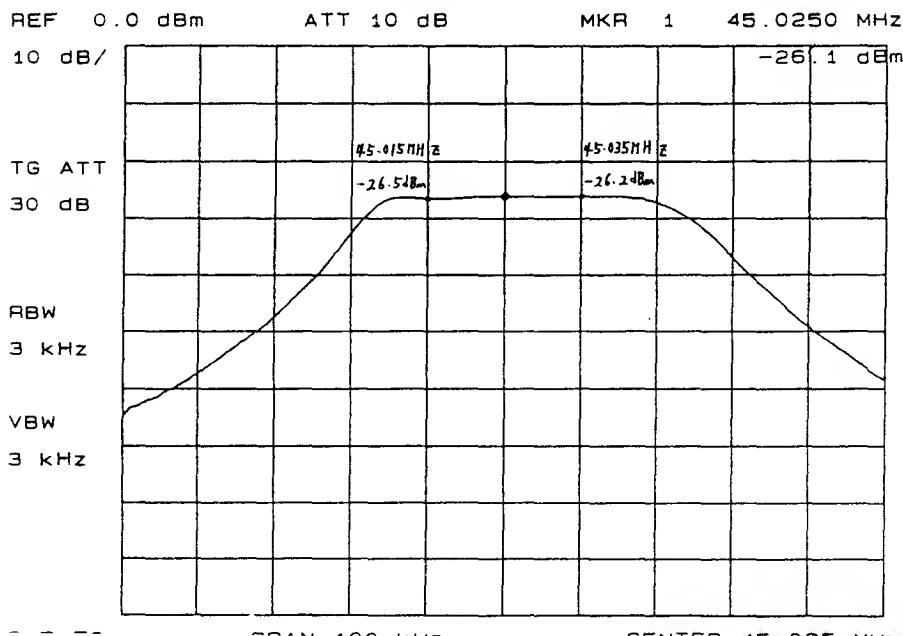

3. MCF (MONOLITHIC CRYSTAL FILTER) ADJUSTMENT

Set the receiver STEP for 50Hz, MODE for AM or NFM, FREQUENCY 0.1000 - 499.9995MHz. Connect output of the tracking generator through 1000PF capacitor to base of Q2 2SC2759 and the spectrum analyzer at pin #16 of IC1 MC3357 through 1000PF capacitor. Adjust ferrite cores of transformers L7, 19 & 20 to get flat and highest response as shown below.


Output level of the tracking generator: -50dBm

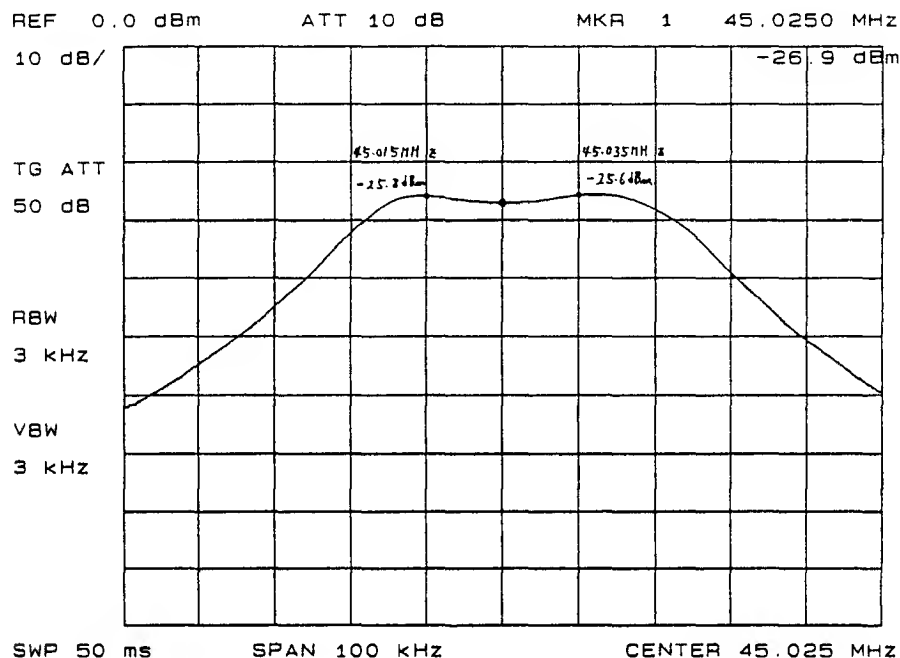

Change receiving frequency to 500.000 - 939.99995MHz and output of the tracking generator to emitter of Q4 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L14 to get flat and highest response as shown below.


Output level of the tracking generator: -30dBm

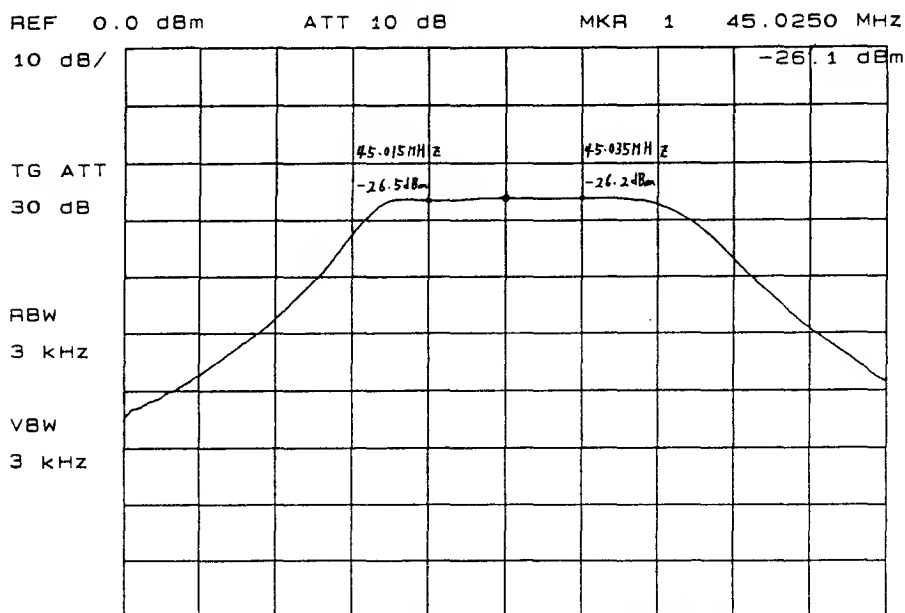

3. MCF (MONOLITHIC CRYSTAL FILTER) ADJUSTMENT

Set the receiver STEP for 50Hz, MODE for AM or NFM, FREQUENCY 0.1000 - 499.9995MHz. Connect output of the tracking generator through 1000PF capacitor to base of Q2 2SC2759 and the spectrum analyzer at pin #16 of IC1 MC3357 through 1000PF capacitor. Adjust ferrite cores of transformers L7, 19 & 20 to get flat and highest response as shown below.


Output level of the tracking generator: -50dBm

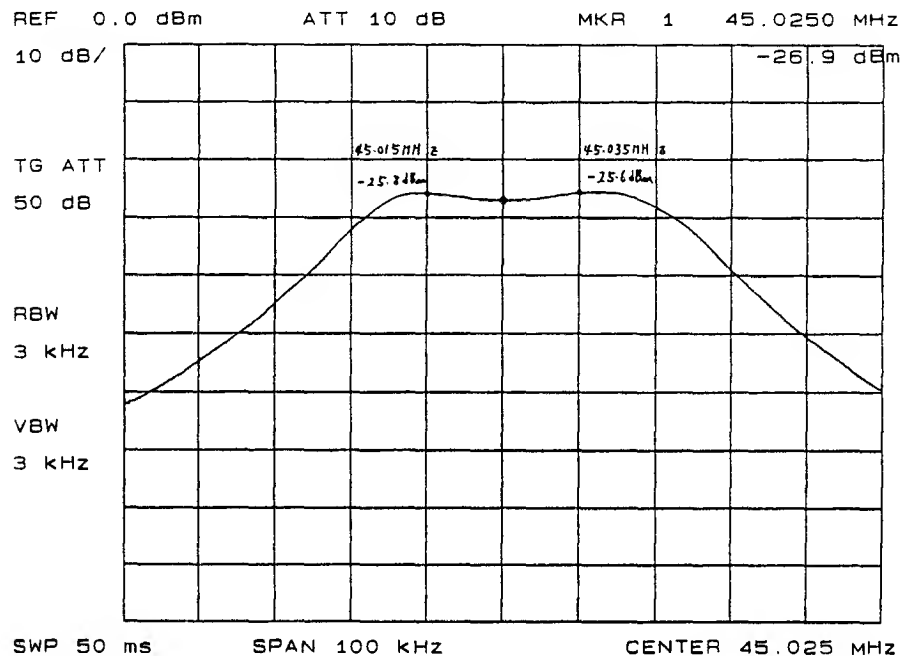

Change receiving frequency to 500.000 - 939.99995MHz and output of the tracking generator to emitter of Q4 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L14 to get flat and highest response as shown below.


Output level of the tracking generator: -30dBm

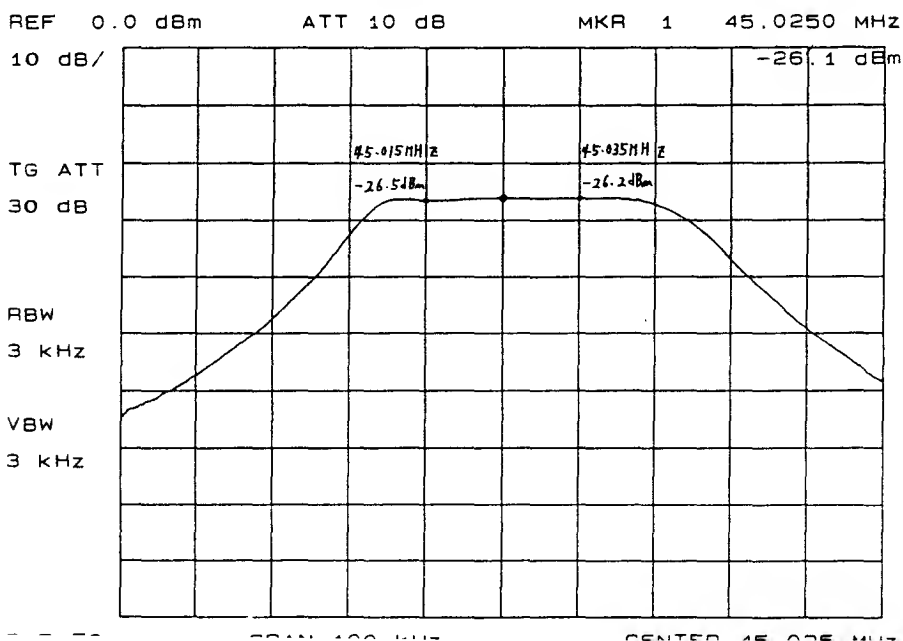

Change receiving frequency to 940.000 - 1299.99995MHz and output of the tracking generator to emitter of Q6 2SC2759 through 1000PF capacitor.

Adjust ferrite core of transformer L18 to get flat and highest response as shown below.

Output level of the tracking generator: -30dBm

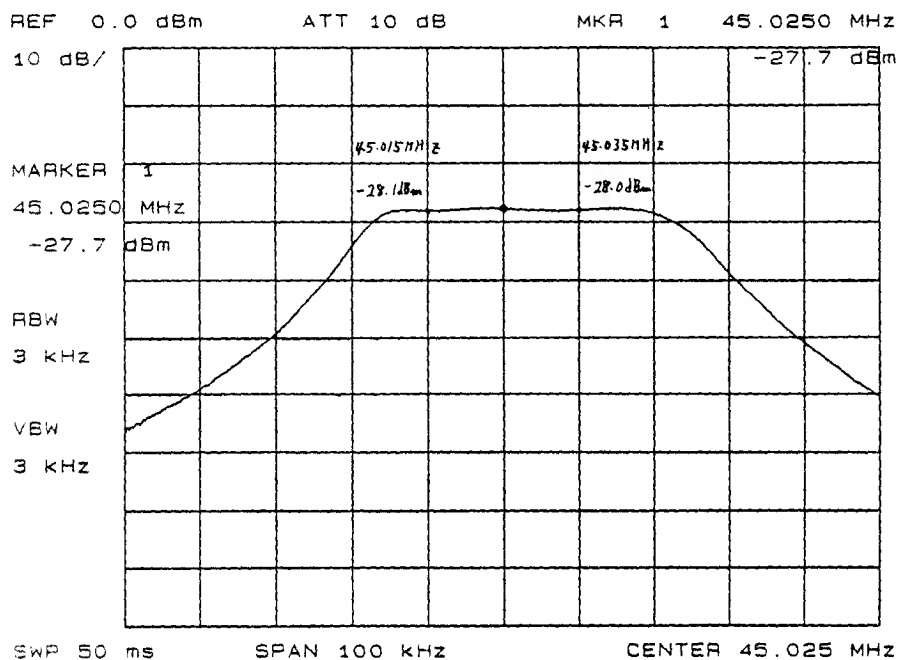

4. HELICAL RESONATORS & INJECTION LEVEL ALIGNMENT

Set the receiver, STEP: 50Hz, MODE: AM, FREQUENCY: 128.90000MHz and connect the signal generator output to antenna jack of the receiver. Connect 8 ohm 2 watts non-inductive resistor as an external load to external speaker jack and paralleled with oscilloscope, AC voltmeter & SINAD meter.

Also connect DC voltmeter at pin #10 of J9 connector of the main unit board for AGC voltage.

Set the VR5 potentiometer at fully clockwise position in this stage.

Set SG frequency 128.90000MHz and modulation AM 60% and output level to indicate 3.0 V DC at pin #10 of J9 (AGC) on the DC voltmeter.

Set SG output off then adjust VR3 potentiometer to get 4.8 V on the DC voltmeter.

Then set SG output on and adjust helical resonator L1 (three metal screws), RF transformers L29 & 31 for minimum indication on DC voltmeter. Check 10dB signal to noise ratio is obtainable at less than +6dBu EMF input for the receiver.

In same setting as above except frequency change of receiver/SG to 880.90000MHz, adjust helical resonator L10 (three metal screws) and trimmer capacitor TC7 for minimum indication on DC voltmeter. Check 10dB signal to noise ratio is obtainable at less than +6dBu EMF input for the receiver.

Remain same setting as above adjustment except frequency change to 940.90000MHz, then adjust the helical resonator L15 (three metal screws) and trimmer capacitor TC8 for minimum indication on DC voltmeter.

Check if 10dB signal to noise ratio is obtainable at less than +6dBu EMF input for the receiver.

Change frequency of the receiver/SG to 0.24300MHz and set SG output level for 0 - +7dBu EMF.

Adjust trimmer capacitor TC6 for minimum deflection of the SINAD meter.

Check if 10dB signal to noise ratio is obtainable at less than +12dBu EMF input for the receiver.

5. 455KHz ADJUSTMENT

Remain same setting as above 4. alignment, change MODE to WFM and frequency to 128.90000MHz, SG modulation FM 50KHz deviation and output level for 50dBu EMF.

Adjust transformer L28 to get symmetric and largest wave form on the oscilloscope screen.

Check if 12dB SINAD is obtainable at less than +6dBu EMF input for the receiver.

Change MODE to NFM and frequency to 780.90000MHz, SG modulation FM with 3.5KHz deviation and output level for -3dBu EMF.

Adjust transformer L29 for minimum deflection on SINAD meter.

Check if 12dB SINAD is obtainable at less than -3dBu EMF input for the receiver.

6. S METER ADJUSTMENT

Set the receiver at 128.90000MHz, AM mode, 50Hz step and connect SG output to antenna jack of the receiver same frequency, 0dBu EMF, no modulation.

Adjust potentiometer VR5 (fully clockwise positioned in early stage of adjustment) for two dots indication on the LCD display.

Change frequency to 880.90000MHz and check if two dots S indication occurs with -3 to +6dBu EMF input for the receiver.

Change frequency to 940.90000MHz and check if two dots S indication occurs with -3 to +6dBu EMF input for the receiver.

Set the receiver at 128.90000MHz, WFM mode, 50Hz step and connect SG output to antenna jack of the receiver same frequency, +3dBu EMF level, no modulation.

Adjust potentiometer VR4 for two dots indication on the LCD "S" display.

CHECK

1. SENSITIVITY

Set the receiver 1299.90000MHz, NFM mode, 50Hz step and connect SG setting with same frequency, -3dBu EMF output, FM modulation 3.5KHz deviation to antenna jack. Connect SINAD meter to the external speaker jack of the receiver paralleled with 8 ohm non-inductive resistor as a dummy load. Check if more than 12dB SINAD is obtained.

Change frequency of the receiver and SG to 1999.90000MHz, SG output level to +6dBu EMF. Check if more than 12dB SINAD is obtained.

2. DISTORTION ON SSB/CW

Set the receiver 29.39000MHz, LSB mode, 50Hz step and connect SG setting 29.38850MHz, no modulation, 50dBu EMF output level to antenna jack. Connect distortion meter to the external speaker jack of the receiver paralleled with 8 ohm non-inductive resistor and the frequency counter for audio range. Check if audio output tone of the receiver is within 500-2500Hz and in less than 30% distortion.

Change receiving mode to USB and SG frequency to 29.39150MHz. Check if the output beat tone of the receiver within 500-2500Hz and in less than 30% distortion.

Change receiving mode to CW and SG frequency to 29.39000MHz. Check if the output beat tone is within 400-1500Hz and in less than 30% distortion.

AR3000A FRONT UNIT DC VOLTAGE

PART NO.	BASE	COLLECTOR	EMITTER	REMARKS
Q40 DTC124TK	4.4 (V)	0.0 (V)	GND	100KHz-30MHz
Q40 DTC124TK	3.6	0.0	GND	940MHz-2036MHz
Q40 DTC124TK	0.0	9.1	GND	30MHz-940MHz
Q41 DTB123YK	0.0	9.0	9.0	100KHz-30MHz
				940MHz-2036MHz
Q41 DTB123YK	9.1	0.0	9.0	30MHz-940MHz
Q5 DTC124TK	4.9	0.0	GND	ATT ON
Q5 DTC124TK	0.0	8.9	GND	ATT OFF
Q6 DTC124TK	0.0	8.9	GND	ATT ON
Q6 DTC124TK	8.9	0.0	GND	ATT OFF
Q7 DTC124TK	4.9	0.0	GND	ATT ON
Q7 DTC124TK	0.0	4.6	GND	ATT OFF
Q8 DTC124TK	0.0	8.9	GND	ATT ON
Q8 DTC124TK	4.6	0.0	GND	ATT OFF
Q9 DTB123YK	8.9	0.0	8.9	ATT ON
Q9 DTB123YK	0.0	8.8	8.9	ATT OFF
Q24 DTC124TK	4.8	0.1	GND	100-500KHz ON
Q24 DTC124TK	0.0	8.4	GND	100-500KHz OFF
Q23 DTC124TK	4.8	0.0	GND	500KHz-2.5MHz ON
Q23 DTC124TK	0.0	8.4	GND	500KHz-2.5MHz OFF
Q22 DTC124TK	4.8	0.0	GND	2.5-10MHz ON
Q22 DTC124TK	0.0	8.4	GND	2.5-10MHz OFF
Q21 DTC124TK	4.8	0.0	GND	10-30MHz ON
Q21 DTC124TK	0.0	8.4	GND	10-30MHz OFF
Q17 DTC124TK	4.9	0.1	GND	30-50MHz ON
Q17 DTC124TK	0.0	8.4	GND	30-50MHz OFF
Q16 DTC124TK	4.9	0.1	GND	50-108MHz ON
Q16 DTC124TK	0.0	8.5	GND	50-108MHz OFF
Q15 DTC124TK	4.9	0.1	GND	108-136MHz ON
Q15 DTC124TK	0.0	8.5	GND	108-136MHz OFF
Q14 DTC124TK	4.9	0.1	GND	136-174MHz ON
Q14 DTC124TK	0.0	8.5	GND	136-174MHz OFF
Q13 DTC124TK	4.9	0.1	GND	174-224MHz ON
Q13 DTC124TK	0.0	8.5	GND	174-224MHz OFF
Q12 DTC124TK	4.9	0.1	GND	224-335MHz ON
Q12 DTC124TK	0.0	8.5	GND	224-335MHz OFF
Q11 DTC124TK	4.9	0.1	GND	335-500MHz ON
Q11 DTC124TK	0.0	8.5	GND	335-500MHz OFF
Q10 DTC124TK	4.9	0.1	GND	500-940MHz ON
Q10 DTC124TK	0.0	8.5	GND	500-940MHz OFF
Q1 2SC3585	0.8	3.2	GND	940-2036MHz ON
Q2 2SK571	-(G)	3.1 (D)	GND (S)	940-2036MHz ON
Q3 2SK571	-(G)	3.1 (D)	GND (S)	940-2036MHz ON
Q4 DTC124TK	4.1	0.0	GND	940-2036MHz ON
Q4 DTC124TK	0.0	8.5	GND	940-2036MHz OFF
Q25 2SC3356	0.8	3.6	GND	100KHz-30MHz ON
Q26 DTC124TK	4.2	0.0	GND	100KHz-30MHz ON
Q26 DTC124TK	0.0	8.4	GND	100KHz-30MHz ON
Q18 2SC3585	0.8	3.2	GND	30-940MHz ON
Q19 2SK571	-(G)	3.6 (D)	GND (S)	30-940MHz ON
Q20 DTC124TK	4.2	0.0	GND	30-940MHz ON
Q20 DTC124TK	0.0	8.5	GND	30-940MHz OFF
Q35 DTC124TK	0.0	2.8	GND	30-940MHz ON
Q35 DTC124TK	2.9	0.0	GND	30-940MHz OFF
Q36 DTC124TK	2.8	0.0	GND	30-940MHz ON

AR3000A FRONT UNIT DC VOLTAGE

PART NO.	ANODE	CATHODE	REMARKS
D37 1SS269	4.8 (V)	4.1 (V)	K-C170 100-500KHz
D37 1SS269	4.8	4.1	K-C148 2.5-10MHz
D39 1SS269	4.8	4.1	K-C176 100-500KHz
D39 1SS269	4.8	4.1	K-C167 500KHz-2.5MHz
D38 1SS269	4.8	4.1	500KHz-2.5MHz
D35 1SS269	4.8	4.1	10-30MHz
D36 1SS269	4.8	4.1	K-C156 2.5-10MHz
D36 1SS269	4.8	4.1	K-C145 10-30MHz
D34 1SV196	4.8	4.1	ATT OFF 100KHz-30MHz
			940-2036MHz
D32 1SV196	2.4	1.8	ATT ON 100KHz-30MHz
			940-2036MHz
D33 1SV196	1.8	1.3	ATT ON 100KHz-30MHz
			940-2036MHz
D45 1S2837	4.8	4.2	A-Q24 100-500KHz
D45 1S2837	4.8	4.2	A-Q21 10-30MHz
D46 1S2837	4.8	4.2	A-Q23 500KHz-2.5MHz
D46 1S2837	4.8	4.2	A-Q22 2.5-10MHz
D28 1SS269	3.7	2.9	30-50MHz
D29 1SS269	4.1	3.3	30-50MHz
D26 1SS269	3.7	2.9	50-108MHz
D27 1SS269	4.1	3.3	50-108MHz
D22 1SS269	3.7	2.9	K-C86 108-136MHz
D22 1SS269	3.7	2.9	K-C64 174-224MHz
D25 1SS269	4.1	3.3	K-C94 108-136MHz
D25 1SS269	4.1	3.3	K-C83 136-174MHz
D24 1SS269	3.7	2.9	136-174MHz
D23 1SS269	4.1	3.3	174-224MHz
D16 1SS268	4.5	3.7	224-335MHz
D17 1SS269	3.7	2.9	224-335MHz
D19 1SS268	4.9	4.1	224-335MHz
D18 1SS269	4.1	3.3	224-335MHz
D12 1SS268	4.5	3.7	335-500MHz
D13 1SS269	3.7	2.9	335-500MHz
D15 1SS268	4.9	4.1	335-500MHz
D14 1SS269	4.1	3.3	335-500MHz
D5 1SS268	5.3	4.5	500-940MHz
D6 1SS269	4.5	3.7	500-940MHz
D8 1SS268	5.3	4.5	500-940MHz
D7 1SS269	4.5	3.7	500-940MHz
D4 1SV196	4.8	4.1	ATT OFF 30-940MHz
D2 1SV196	2.6	1.9	ATT ON 30-940MHz
D3 1SV196	1.9	1.3	ATT ON 30-940MHz
D9 1SS268	6.1	5.4	30-500MHz
D9 1SS268	5.3	4.7	500-940MHz
D9 1SS268	8.9	8.2	100KHz-30MHz 940-2036MHz
D10 1SS269	5.4	4.5	30-500MHz
D10 1SS269	4.7	4.1	500-940MHz
D10 1SS269	8.2	7.7	100KHz-30MHz 940-2036MHz
D20 1SS268	4.5	3.7	30-500MHz
D20 1SS268	4.1	7.3	500-940MHz
D20 1SS268	7.7	7.3	100KHz-30MHz 940-2036MHz
D11 1SS268	5.6	4.8	30-500MHz
D11 1SS268	5.2	8.0	500-940MHz
D11 1SS268	8.9	8.2	100KHz-30MHz 940-2036MHz
D21 1SS268	4.8	7.2	30-500MHz
D21 1SS268	8.0	7.4	500-940MHz
D21 1SS268	8.2	7.4	100KHz-30MHz 940-2036MHz
D41 1SV196	4.8	4.1 (8.4)	100KHz-30MHz (OFF)

PART NO.	ANODE	CATHODE	REMARKS
D31 1SV196	4.8	4.1 (8.5)	30-940MHz (OFF)
D1 1SV196	4.8	4.1 (8.5)	940-2036MHz (OFF)
D47 1S2837	4.2	2.9	A-Q38 100KHz-30MHz
D47 1S2837	4.3	2.9	A-Q33 940-2036MHz
D50 1S2837	5.0	4.2	30-940MHz
D49 1S2837	5.0	4.2	940-2036MHz
D51 1S2837	5.0	4.2	A-Q34 940-2036MHz
D51 1S2837	5.0	4.2	A-Q39 100KHz-30MHz
D44 1S2837	4.2	3.6	A-D50 30-940MHz
D44 1S2837	4.2	3.6	A-D49 940-2036MHz

AR3000A PLL UNIT DC VOLTAGE

PART NO.	BASE	COLLECTOR	EMITTER	REMARKS
Q8 2SC1009A	2.34 (V)	4.96 (V)	1.88 (V)	
Q9 2SC1009A	0.73	2.70	GND	
Q10 2SC3356	0.41	3.41	GND	
Q11 2SC3585	0.52	3.62	GND	
Q12 2SC3585	0.35	4.10	GND	
Q13 2SC3585	0.47	2.66	GND	
Q14 2SC3585	0.67	3.46	GND	
Q15 2SC3585	0.79	2.75	GND	
Q1 2SC3585	0.80	3.88	GND	
Q2 2SC3585	0.80	3.90	GND	
Q3 2SC3585	0.80	3.14	GND	
Q4 2SA812	4.88	0.00	5.00	WHEN PLL LOCKED
Q4 2SA812	4.40	4.96	5.00	WHEN PLL UNLOCKED
Q5 2SC1623	0.00	3.23	GND	WHEN PLL LOCKED
Q5 2SC1623	0.61	0.02	GND	WHEN PLL UNLOCKED
Q6 2SC1009A	0.60	1.63	GND	
Q7 2SC1623	5.90	6.12	5.22	

AR3000A MAIN UNIT DC VOLTAGE

PART NO.	BASE	COLLECTOR	EMITTER	REMARKS
Q17 2SC3585	0.80 (V)	2.87 (V)	GND (V)	
Q2 2SC2759	0.74	2.27	GND	
Q4 2SC2759	0.72	2.45	GND	
Q6 2SC2759	1.59	2.97	0.92	
Q11 2SC2759	0.73	2.71	GND	WFM
Q10 2SC1009A	2.08	4.37	1.37	WFM
Q12 2SC2759	0.74	2.28	GND	WFM
Q7 DTA123YK	4.71	0.00	5.02	WFM
Q7 DTA123YK	0.45	5.01	5.02	OTHER THAN WFM
Q8 DTC144TK	4.71	0.04	GND	WFM
Q8 DTC144TK	0.45	5.00	GND	OTHER THAN WFM
Q9 DTA123YK	0.04	4.98	5.02	WFM
Q9 DTA123YK	5.00	0.04	5.02	OTHER THAN WFM
Q14 2SC2759	0.72	4.73	GND	
Q23 2SC1009A	1.33	1.82	0.63	
Q24 2SC1009A	3.15	2.46	3.65	
Q25 2SC1009A	2.81	3.56	2.17	LSB USB CW
Q25 2SC1009A	2.82	3.57	2.15	OTHER THAN SSB
Q18 2SC1009A	3.80	5.02	3.17	
Q21 2SC1623	0.75	0.98	0.18	
Q20 DTC124TK	0.21	5.47	0.00	AM
Q20 DTC124TK	0.51	4.68	0.07	AM 128.9MHz TO J1 +20dBuVEMF 60%
Q20 DTC124TK	0.72	3.16	0.21	AM 128.9MHz TO J1
Q19 DTC124TK	5.43	5.03	4.87	AM
Q19 DTC124TK	4.66	5.03	4.08	AM 128.9MHz TO J1 +20dBuVEMF 60%
Q19 DTC124TK	3.15	5.02	2.57	AM 128.9MHz TO J1 +40dBuVEMF 60%
Q44 DTC124TK	4.19	0.00	GND	LSB
Q44 DTC124TK	3.71	0.00	GND	USB CW
Q36 2SC1623	1.59	1.90	1.03	NFM AM
Q36 2SC1623	0.60	0.95	0.01	WFM LSB USB CW
Q35 DTC144TK	4.26	0.01	GND	WFM
Q35 DTC144TK	3.74	0.01	GND	LSB
Q35 DTC144TK	3.27	0.01	GND	USB CW
Q15 DTC144TK	4.71	0.00	GND	WFM
Q31 DTC124TK	3.95	0.01	GND	POWER SW ON
Q31 DTC124TK	0.00	5.46	GND	POWER SW OFF
Q34 DTC124TK	3.43	0.00	GND	WHEN PLL LOCK
Q34 DTC124TK	0.03	1.02	GND	WHEN PLL UNLOCK
Q40 DTC144TK	3.51	0.00	GND	WHEN SQ OFF
Q40 DTC144TK	0.00	OFF	GND	WHEN SQ ON
Q41 DTB123YK	0.00	ON	RECORDING	
Q41 DTB123YK	EMITTER	OFF	RECORDING	WHEN SQ OFF
Q32 2SC1623	0.13	OFF	RECORDING	WHEN SQ ON
Q32 2SC1623	0.61	ON	TERMINAL (V)	WHEN SQ OFF
Q30 DTC124TK	0.00	2.84	GND	WHEN SQ ON
Q30 DTC124TK	4.95	0.00	GND	NORMAL MODE
Q29 DTC124TK	2.84	ON	GND	WHEN ALARM ON
Q29 DTC124TK	0.00	OFF	GND	NORMAL MODE
Q33 2SC1623	3.73	4.34	3.21	WHEN ALARM OFF
Q43 DTC124TK	3.46	0.00	GND	NFM
Q43 DTC124TK	0.10	5.03	GND	WHEN SQ ON
				WHEN SQ OFF
IC12 S8054HN	PIN-NO	H-L	(V)	REMARK
	1	H	4.62	POWER SOURCE (V) OVER 8V
	1	L	0.10	POWER SOURCE (V) UNDER 8V

AR3000A MAIN UNIT DC VOLTAGE

PART NO.	ANODE	CATHODE	REMARKS
D4 1SS268	2.86(V)	2.13(V)	100KHz-499.99995MHz 1650MHz-2036MHz
D5 1SS268	2.84	2.13	500MHz-939.99995MHz ANODE L14 1300MHz-1649.99995MHz
D5 1SS268	2.84	2.13	940MHz-1299.99995MHz ANODE L18
D6 1SS268	3.64	2.94	OTHER THAN WFM ANODE R27
D6 1SS268	3.43	2.73	WFM ANODE R29
D7 1SS268	3.64	2.94	OTHER THAN WFM ANODE L20
D7 1SS268	3.43	2.74	WFM ANODE R30
D15 1SS268	3.17	2.48	NFM AM ANODE R89
D15 1SS268	2.44	1.76	LSB ANODE R91
D15 1SS268	2.20	1.53	USB CW ANODE R91
D17 1SS268	3.42	2.70	NFM AM ANODE R90
D17 1SS268	2.94	2.23	LSB ANODE R92
D17 1SS268	2.64	1.93	USB CW ANODE R92
D28 1SS269	1.79	1.12	WFM CATHODE R206
D28 1SS269	1.79	1.11	WFM CATHODE R173
D16 1SS269	1.76	1.11	WFM CATHODE R173
D16 1SS269	1.76	1.06	WFM CATHODE R93
D21 1SS268	0.32	GND	LSB 100KHz
			-939.99995MHz ANODE R106
D21 1SS268	0.33	GND	USB CW 940MHz-2036MHz ANODE R106
D21 1SS268	0.31	GND	USB CW 100KHz
			-939.99995MHz ANODE R107
D21 1SS268	0.35	GND	LSB 940MHz-2036MHz ANODE R107
D20 1S2837	4.72	4.19	LSB
D20 1S2837	4.24	3.72	USB CW ANODE D22
D22 1S2837	4.79	4.25	USB
D22 1S2837	4.78	4.24	CW
D19 1S2837	4.85	4.31	NFM
D19 1S2837	4.85	4.31	AM
D10 1SS268	3.62	2.93	NFM AM ANODE R81
D10 1SS268	4.71	4.00	WFM ANODE R80
D10 1SS268	3.51	2.82	LSB ANODE R81
D10 1SS268	3.08	2.39	USB CW ANODE R81
D29 1S2837	4.31	3.83	NFM AM ANODE D19
D29 1S2837	4.19	3.71	LSB ANODE D20
D29 1S2837	3.72	3.25	USB CW ANODE D20
D14 1S2837	4.71	4.26	WFM
D14 1S2837	4.19	3.74	LSB ANODE D20
D14 1S2837	3.72	3.28	USB CW ANODE D20
D12 ND411	0.29	0.24	CATHODE C88 ANODE R65
D12 ND411	0.24	0.19	CATHODE R68
D11 1S2837	0.83	1.42	NFM AM SQ-VR MIN
D11 1S2837	0.53	1.04	NFM AM SQ-VR THRESHOLD
D11 1S2837	-0.09	0.38	NFM AM SQ-VR MAX
D11 1S2837	0.90	1.37	WFM SQ-VR MIN
D11 1S2837	0.55	0.90	WFM SQ-VR THRESHOLD
D11 1S2837	0.55	0.38	WFM SQ-VR MAX
D11 1S2837	0.73	1.48	SSB SQ-VR MIN
D11 1S2837	0.60	0.30	SSB SQ-VR THRESHOLD
D11 1S2837	-0.28	0.40	SSB SQ-VR MAX
D23 1S2837	4.79	4.37	USB
D23 1S2837	4.79	4.37	CW
D24 1S2837	4.72	4.31	LSB
D26 1S2837	0.00	0.00	WHEN PLL LOCK ANODE R184

PART NO.	ANODE	CATHODE	REMARKS
D26 1S2837	1.02	0.57	WHEN PLL UNLOCK ANODE R184
D26 1S2837	0.00	0.00	WHEN SQ-OFF ANODE R202
D26 1S2837	0.00	0.62	WHEN SQ-ON ANODE R202
D36 1S2837	3.96	3.51	WHEN SQ-OFF ANODE MC3357-14
D36 1S2837	0.00	0.00	WHEN SQ-ON ANODE MC3357-14

IC-1 MC3357	PIN-NO	VOLTAGE	REMARKS
	1	4.38	
	2	3.75	
	3	4.47	
	4	4.62	
	5	0.94	
	6	0.96	
	7	1.01	
	8	4.60	
	9	1.79	
	10	1.90	
	11	1.94	
	12		SQ-VR FULL CLOCKWISE POSITION
	13		OPEN
	14		3.96 (SQ-OFF) 0.00 (SQ-ON)
	15	GND	
	16	1.95	

06
73
73
3
06
06
07
07
2

1
0
1
1
9
0
0
0
0
0
5
8

BIRDIE LIST

Every complex receiver has frequencies that are difficult or impossible to receive because of internally generated signals. These frequencies are called "BIRDIES". The following is a partial list of such frequencies that may occur in the AR3000. (Noted at 12' oclock squelch control position)

1.59MHz	677.94MHz	1305.60MHz
3.18	686.78	1316.57
12.58	691.20	1318.84
16.78	696.26	1321.18
20.97	696.27	1373.13
76.80	696.28	1382.40
89.60	754.74	1395.20
96.00	768.00	1404.91
102.40	831.54	1408.00
108.80	921.60	1420.80
115.20	989.13	1433.60
123.58	1011.64	1446.40
140.34	1020.91	1449.93
153.60	1065.93	1459.20
170.36	1075.20	1472.00
200.38	1097.71	1472.44
230.40	1142.73	1497.60
370.74	1152.44	1523.20
400.76	1162.97	1536.00
430.78	1165.24	1558.51
460.80	1165.69	1603.53
524.34	1165.70	1626.04
533.18	1167.58	1689.60
537.60	1174.51	1702.84
554.36	1216.00	1750.51
584.38	1219.53	1766.40
601.14	1228.35	1779.64
612.13	1228.80	1795.53
614.40	1251.31	1843.20
656.76	1296.33	1933.24


In addition, there are other frequencies that are difficult to receive because of interference from externally generated signals, such as T.V. stations, other receivers nearby and various other sources of man-made noise.

These frequencies vary from location to location and are therefore impossible to list.

When this type of interference is encountered, it can sometimes be eliminated by moving the squelch control knob counterclockwise (increase squelch action).

RESET & BAUD RATE CHANGE SWITCHES

(CPU/LCD UNIT BOARD CPU SIDE)

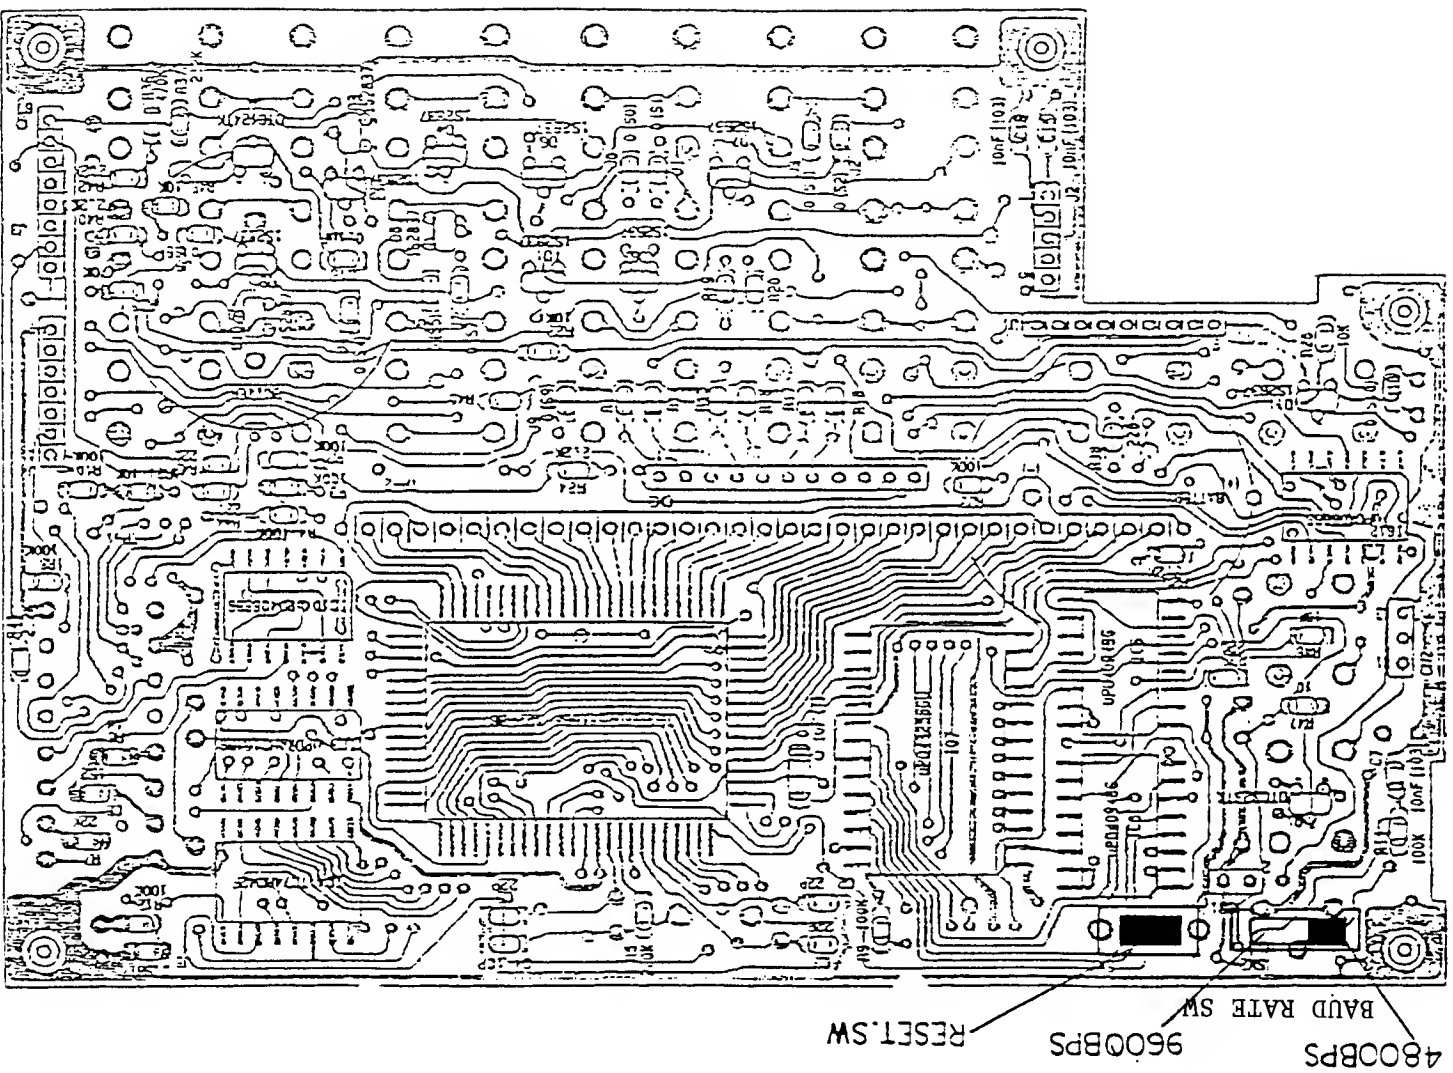

SEMI CONDUCTORS

* DIODES

1S2837 SWITCHING
1SS123 "
1SS268 "
1SS269 "
1SS272 "
1S1588 "
RB100A RECTIFIER
1SV196 PIN DIODE
1SV163 VARI CAP.
1SV166 "
FC52M "
ND411G-1 PAIR
ND487C1-3R QUAD
5082 2831 RING


* TRANSISTORS


2SA812
2SC1009A
2SC1623
2SC2759
2SC3356
2SC3585
2SK571 GaAs MOS FET
DTA123YK
DTB123YK
DTC124TK
DTC144TK
DTC323TK

* INTEGRATED CIRCUITS


uA78L62 VOLTAGE REGULATOR
uPC78M05H "
S-8054HN VOLTAGE DETECTOR
S-81250HG VOLTAGE REGULATOR
L780S09 " WITH STROBE
ICL7660 CMOS VOLTAGE CONVERTER
TL499A SWITCHING REGULATOR
uPC1251G DUAL OPERATIONAL AMPLIFIER
uPD4066BG QUAD BILATERAL SWITCH
uPD4094BG 8 STAGE SHIFT STORE BUS REGISTER
uPD4528BG DUAL MONOSTABLE MULTIVIBRATOR
uPD74HC151G 8 INPUT DATA SELECTOR/MULTIPLEXER
uPD74HC42AF BCD TO DECIMAL DECODER
uPD43256AGU STATIC CMOS RAM
uPD75316GF 1 CHIP 4 BIT MICRO COMPUTER
TC74H107AF DUAL JK FLIP FLOP WITH CLEAR
MB501L 2 MODULUS HIGH SPEED PRESCALER
MC3357 LOW POWER FM IF
MC145156 SERIAL INPUT PLL FREQUENCY SYNTHESIZER
TC5090AP 8 BIT A/D CONVERTER
uPC2002 AF POWER AMPLIFIER
MAX232 RS-232 DRIVER/RECEIVER

ND487C1-3R
(SCHOTTKY BARRIER
DIODE QUAD)

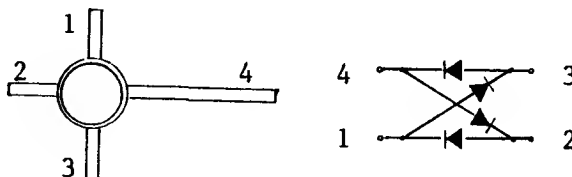


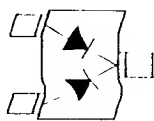


1S2837
1SS268
(SWITCHING)

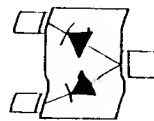


1SS269
(SWITCHING)

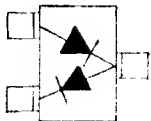


1SS123
(HIGH SPEED SWITCHING)
ND411G-1
(SCHOTTKY BARRIER PAIR)

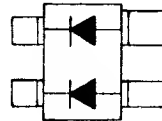


1SS272
(ULTRA HIGH SPEED SW)

 


MC52M
(VARACTOR)
bottom view

 


1SV163
1SV166
(VARACTOR)
1SV196
(PIN DIODE)

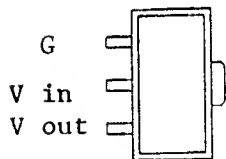


S-81250HG
(VOLTAGE REGULATOR)

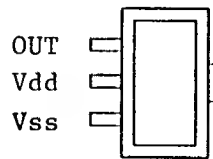


S-8054HN
(VOLTAGE DETECTOR)

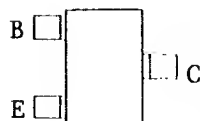


2SA812 DTA123YK
2SC1009A DTB123YK
2SC1623 DTC124TK
2SC2759 DTC144TK
2SC3356
2SC3585
(TRANSISTORS)

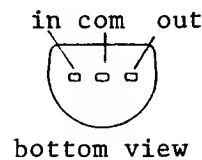


uA78L62
(VOLTAGE REGULATOR)

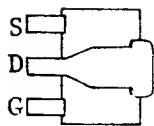


2SK680
(N CHANNEL POWER MOS FET)

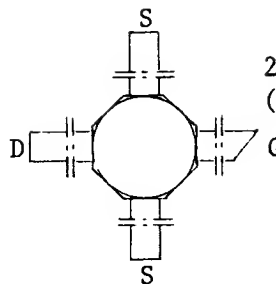

2SK571
(GaAs MES FET)

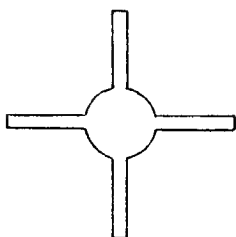


5082 2831
(SCHOTTKY BARRIER DIODE RING)

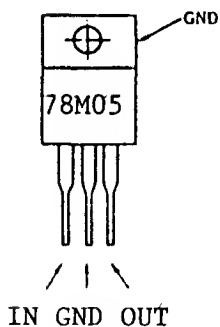


uPC78M05H
(VOLTAGE REGULATOR)


ICL7660
(CMOS VOLTAGE CONVERTER)

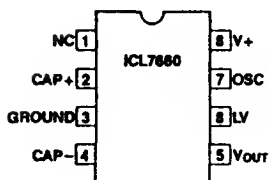


TC74H107AF
(DUAL J-K FLIP-FLOP WITH CLEAR)

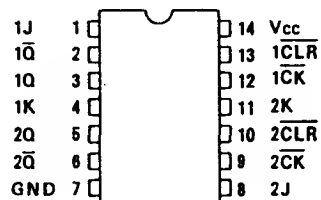


TL499
(SWITCHING REGULATOR)

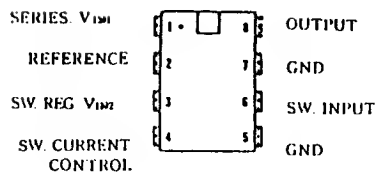



L78QS09
(VOLTAGE REGULATOR WITH STROBE)

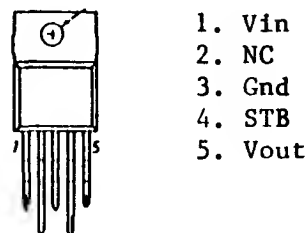

uPC1251
(DUAL OP AMPLIFIER)

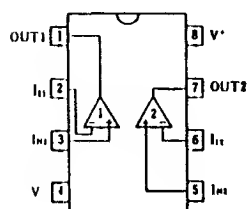


MB501L
(2 MODULUS HIGH SPEED PRESCALER)

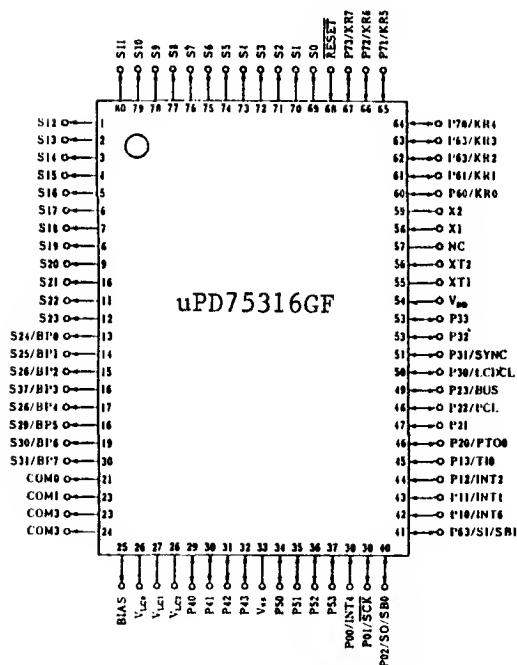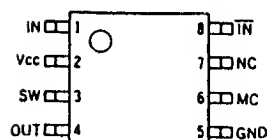


uPD75316GF
(1 CHIP 4 BIT MICRO COMPUTER)

MC3357
(LOW POWER FM IF)

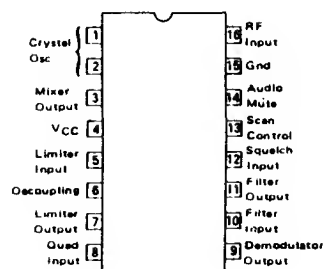

uPC2002
(AF POWER AMPLIFIER)

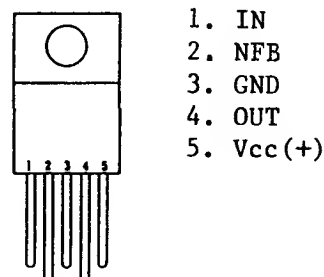

P00-03 : Port 0	S0-31 : Segment Output 0-31
P10-13 : Port 1	COM0-3 : Common Output 0-3
P20-23 : Port 2	V _{LCA-1} : LCD Power Supply 0-2
P30-33 : Port 3	BIAS : LCD Power Supply Bias Control
P40-43 : Port 4	LCDCLK : LCD Clock
P50-53 : Port 5	SYNC : LCD Synchronisation
P60-63 : Port 6	T10 : Timer Input 0
P70-73 : Port 7	PTO0 : Programmable Timer Output 0
BP0-7 : Bit Port	BUZ : Buzzer Clock
KR0-7 : Key Return	PCL : Programmable Clock
ŜCK : Serial Clock	INT0,1,4 : External Vectored Interrupt 0,1,4
SI : Serial Input	INT2 : External Test Interrupt 2
SO : Serial Output	X1,2 : Main-system Clock Oscillation 1, 2
SB0,1 : Serial Bus 0, 1	XT1,2 : Subsystem Clock Oscillation 1, 2
RESET : Reset	NC : Non-connection

TC5090AP




(8-BIT A/D CONVERTER)

uPD4053BG

(TRIPLE 2-CHANNEL MULTIPLEXER)

uPD4094BG

(8 STAGE SHIFT STORE
BUS REGISTER)

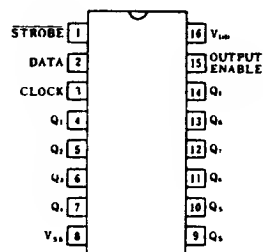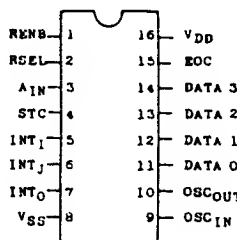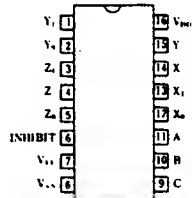

MAX232




(RS-232 DRIVERS/RECEIVERS)

MC145156

(SERIAL INPUT PLL
FREQUENCY SYNTHESIZER)

uPD43256GU

(STATIC CMOS RAM)

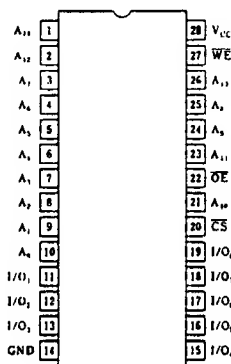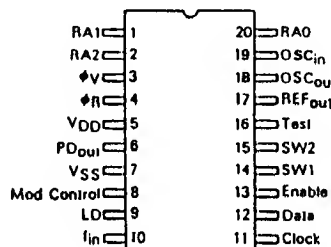
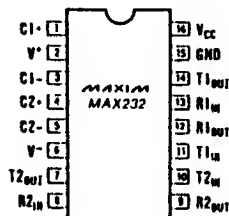


uPD4528BG

(DUAL MONOSTABLE MULTIVIBRATOR)

uPD74HC42

(BCD-TO-DECIMAL DECODER)

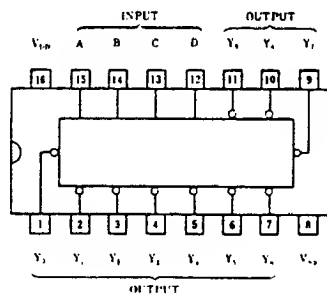
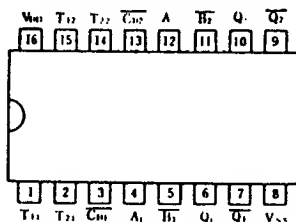


uPD74HC151

(8-INPUT DATA SELECTOR/MULTIPLEXER)

uPD4066BG

(QUAD BILATERAL SWITCH)

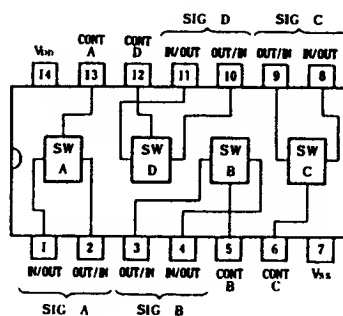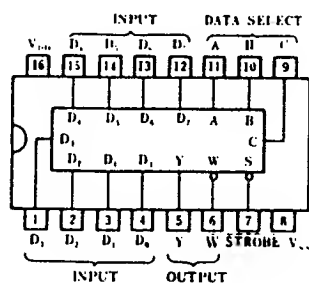


RF COILS

PART NUMBER	MAIN UNIT	PLL UNIT	FRONT UNIT	QTY.	REMARKS
KE-05806	L16			1	198MHz
KE-05807	L11			1	352MHz
KE-03988	*L1			1	736MHz
KE-05151	*L10			1	352MHz
KE-05475	*L15			1	198MHz
KE-04971	L7,14,18,19 20			5	45MHz
KE-04980	L28,29,31			3	455KHz
KE-05170	L2,3,21,22 26,27			6	DBM
KE-05816	L9			1	DBM
KE-05817	L8			1	DBM
KE-04266(1t)		L1,2,4,5, 7,8,9	L4,5,9,12	11	AIR WOUND
KE-03876(2t)		L3,6	L1,3,6,19,20 34,41,48	10	AIR WOUND
KE-03878(3t)			L2,21,28,35, 42,45,49,50	8	AIR WOUND
KE-04267(4t)			L14,43,51	3	AIR WOUND
KE-06197(5t)			L10,46	2	AIR WOUND
KE-06198(6t)			L29,36,47,94 95	5	AIR WOUND
KE-06380(8t)			L40	1	AIR WOUND
KE-06599(2t)			L11	1	AIR WOUND
KE-06613	L30			1	44.575MHz
KE-05507		L14		1	90uH CH.

* 3 GANG HELICAL RESONATORS


FRONT PANEL ASSEMBLY

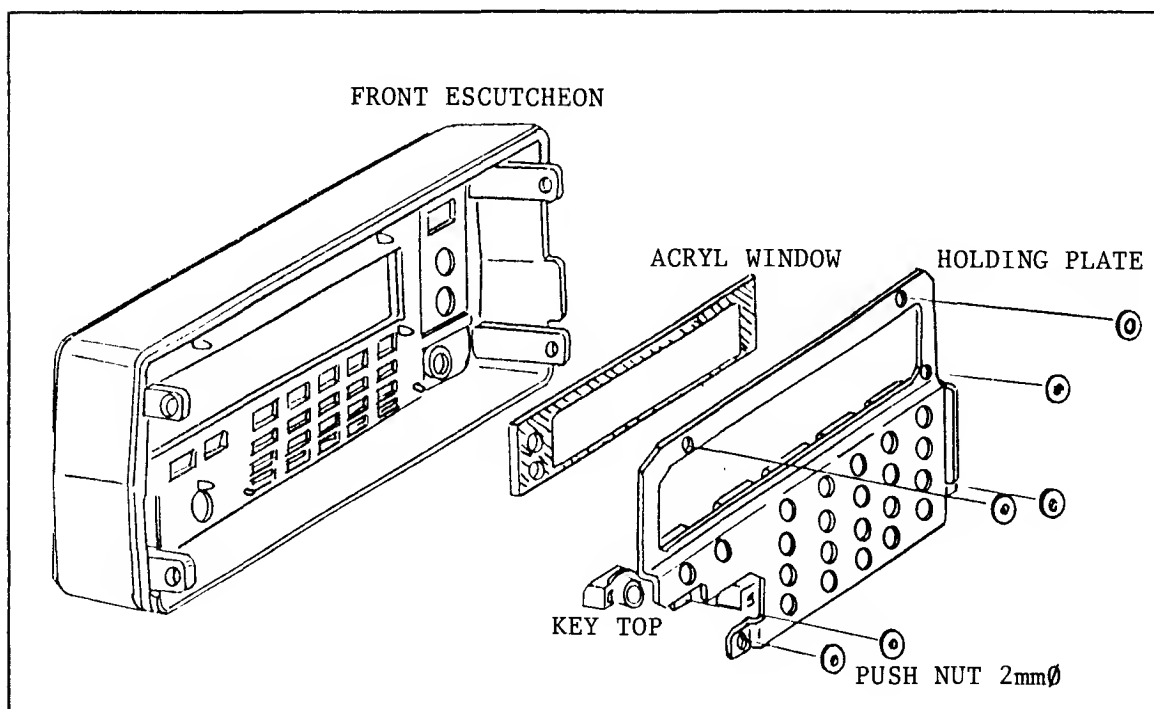


PARTS LIST (MISCELLANEOUS)

Potentiometer control "Volume"	A50K	PRP-124-A-1007-A-1
" " "Squelch"	C10K	" "
" semi fixed	4.7K	{VR4 MAIN UNIT} H0651A
	10k	{VR1, 2 " } H0651A
	47K	{VR3 " } H0651A
	2.2K	{VR5 " } H0651A
	47K	{VR1, 2, 3 FRONT} RH0412C
	10K	{VR1 PLL 2nd} H0651A
Trimmer capacitor	10PF	{TC1, 8, 9, 10, 11 PLL} CVSSA1001 (WHITE)
	7	{TC12 - 15 PLL} CVSSA0701 (RED)
	20	{TC2 - 7 PLL} CVSSC2001 (BLUE)
	10	{TC7 MAIN UNIT} CVSSA1001 (WHITE)
	20	{TC8 MAIN UNIT} CVSSC2001 (BLUE)
	50	{TC9, 10 MAIN UNIT} CVSSG5001 (GREEN)
	20	{TC1 CPU-LCD UNIT} CVSSC2001 (BLUE)
Switch "power"		SPPJ32
"tact"		SKHHAJ10902
"slide"	{AMP ON-OFF FRONT RF UNIT }	SSSS21434A
	{BAUD RATE SW CPU-LCD }	SSSS21434A
"push"	{RESET CPU-LCD }	SKHLAC0001
Connector "antenna"		BNC female
"coaxial" (FRONT BPF/MAIN UNIT)		MM3325-2505
"DC power"		J-0409-01-200
"DIN for AUX"		TCS1290-01-0101
"cable/wire" 2-9 pin		TOYO-1.5
"remote"		WD25F-A WAKA
Jack "Ear phone" 3.5mm DIA.		0785-01-050
"Ext. speaker" 3.5mm DIA.		0863-01-410
Knob "Dial" with rubber ring		
"Volume/Squelch"		
Key top "Power"		
"Keyboard"		
Rotary encoder switch "Dial"		SRBM2L-1
Light emitting diode "green"		TLG211
"red"		TLR211
Liquid crystal display		LD-H7211EZ
Back light		L277
Piezo electric buzzer		PKM22EPP-4001
Lithium battery		CR2032-HA3
Speaker		SM-66NR
Relay		G5Y-1 OMRON 9V
Quartz crystal units (CPU-LCD)		32.768KHz {2 phai x 6}
		4.433MHz {2 phai x 6}
		34.33 MHz
		44.575MHz
		453.5 KHz CSB453.5A2
		456.5 KHz CSB456.5A2
		12.800MHz
Filters	(PLL 2nd OSC)	CFZM455F
		CFJ455K
		SFT10.7MS2A
		45M35BI MCF
Discriminator		CDB455C7
Modules		B.P.F. P-8807B
		D.B.M. P-8901B
		V.C.O. P-8903B


AR3000A EXPLODED VIEW

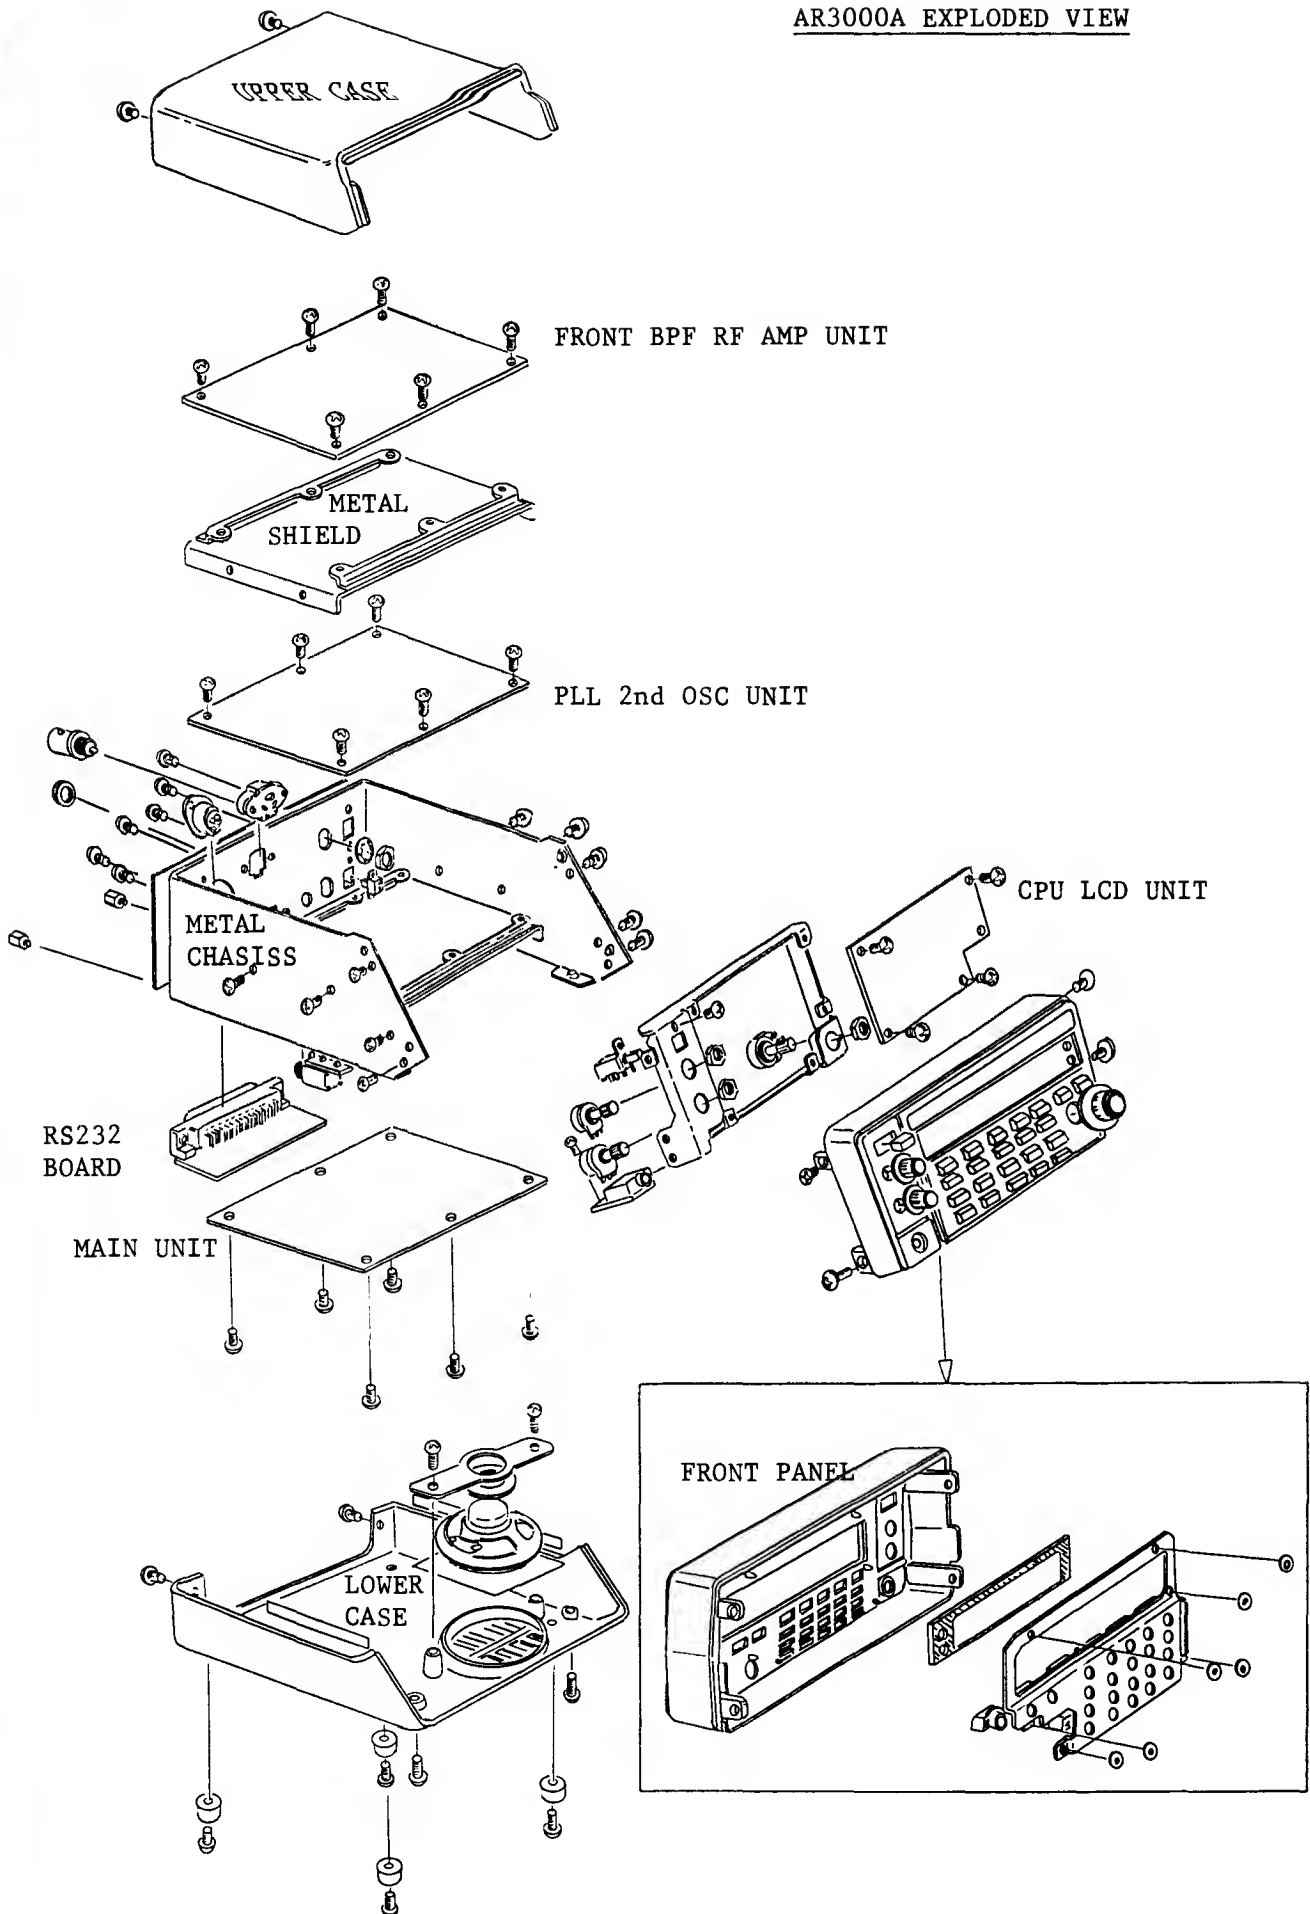


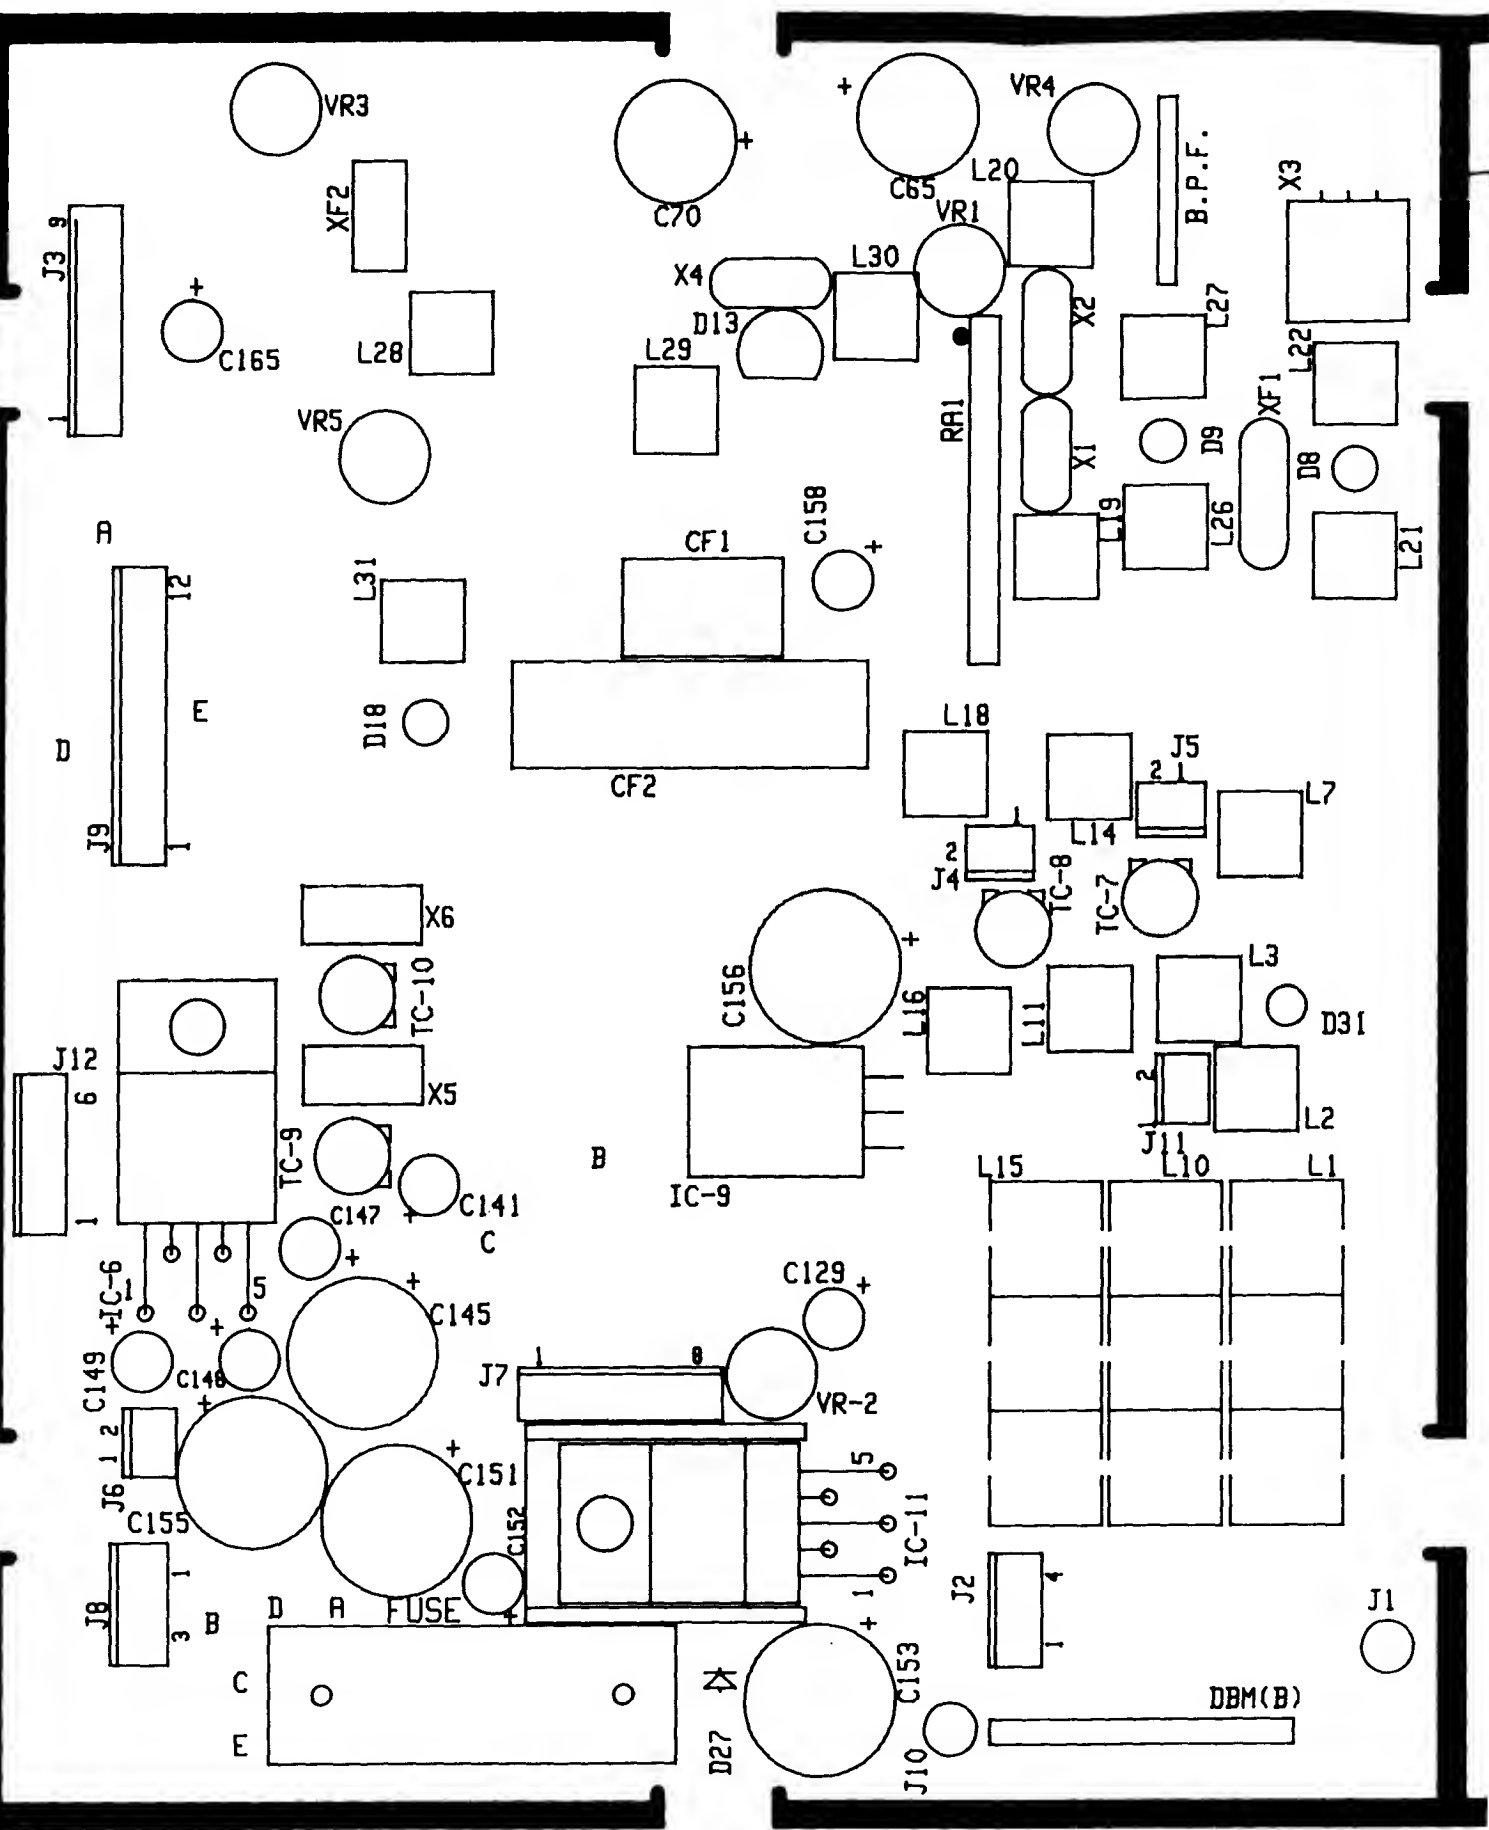


MAIN UNIT PARTS LAYOUT


00.

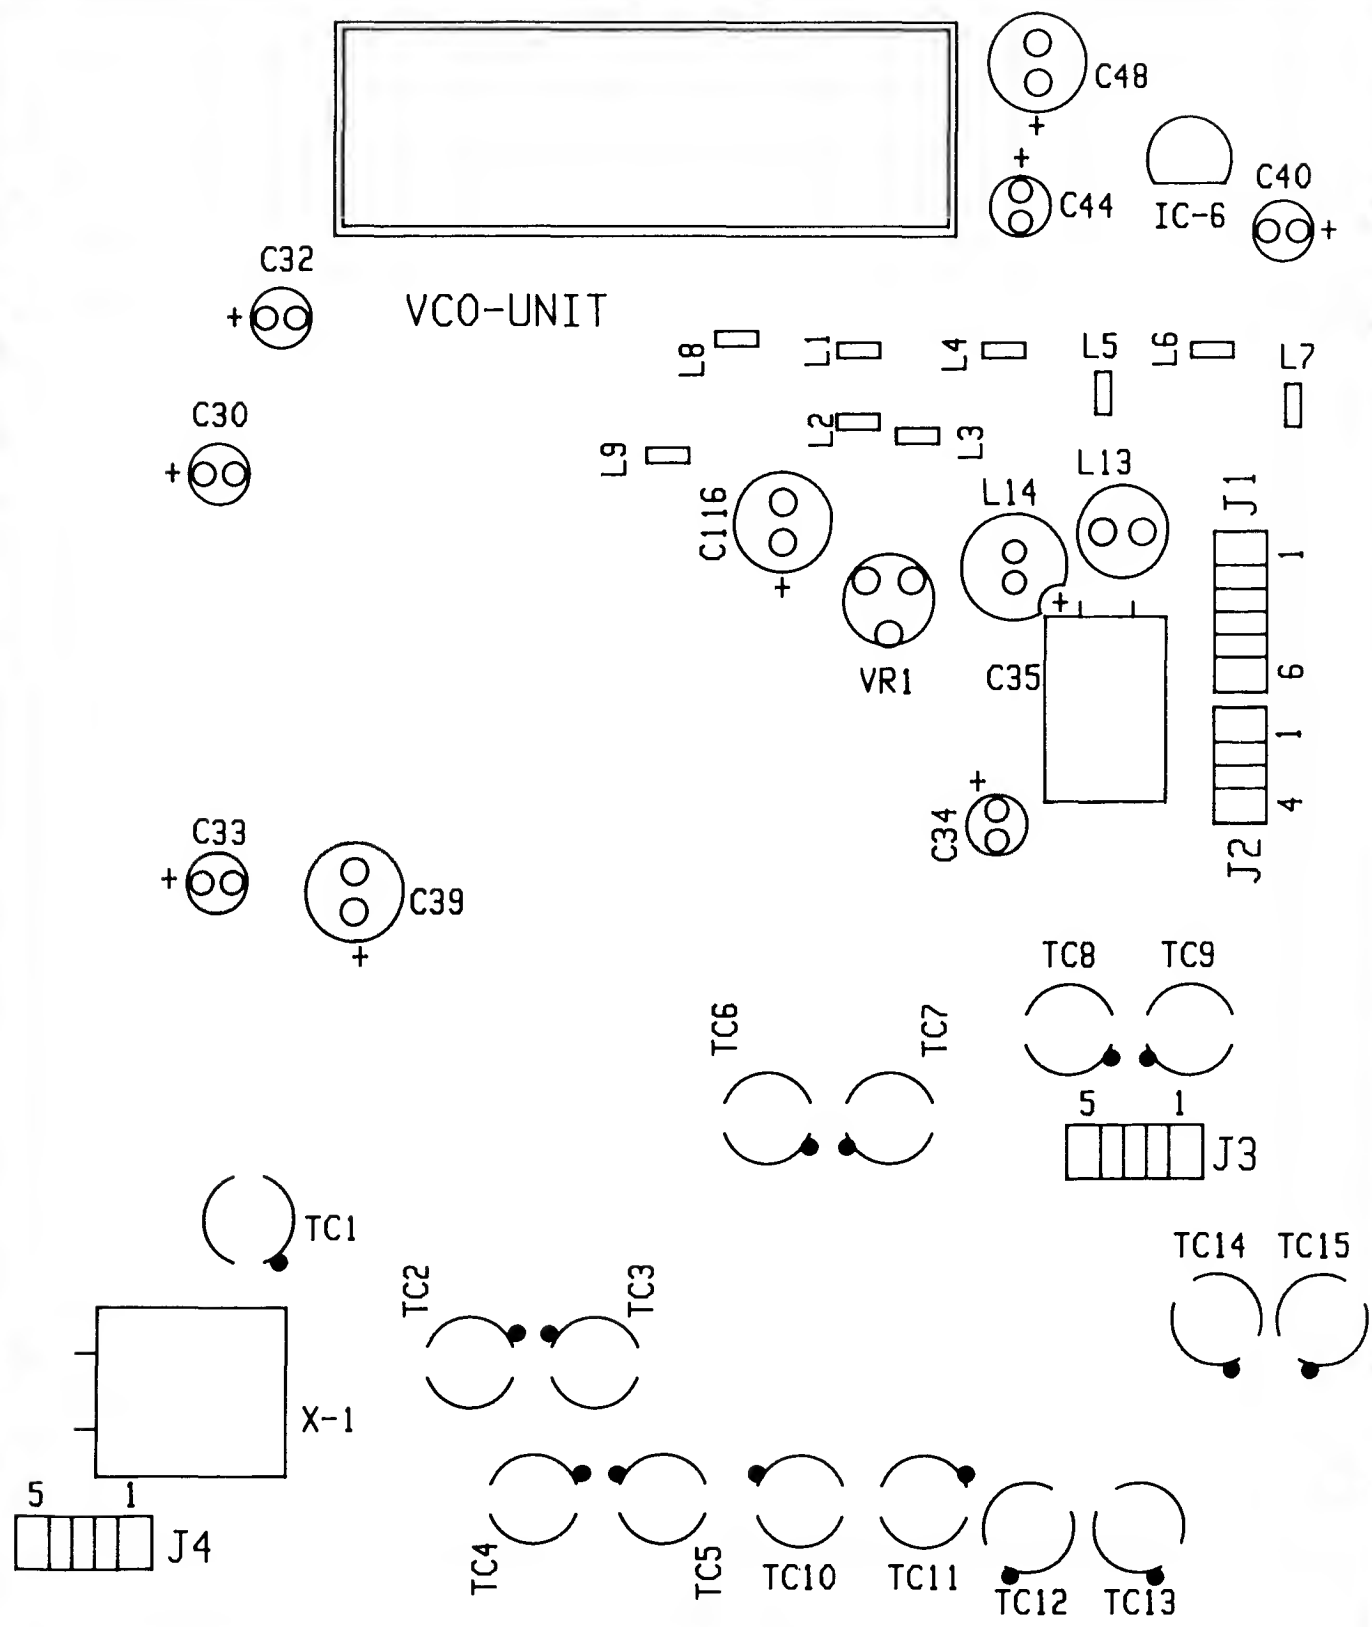

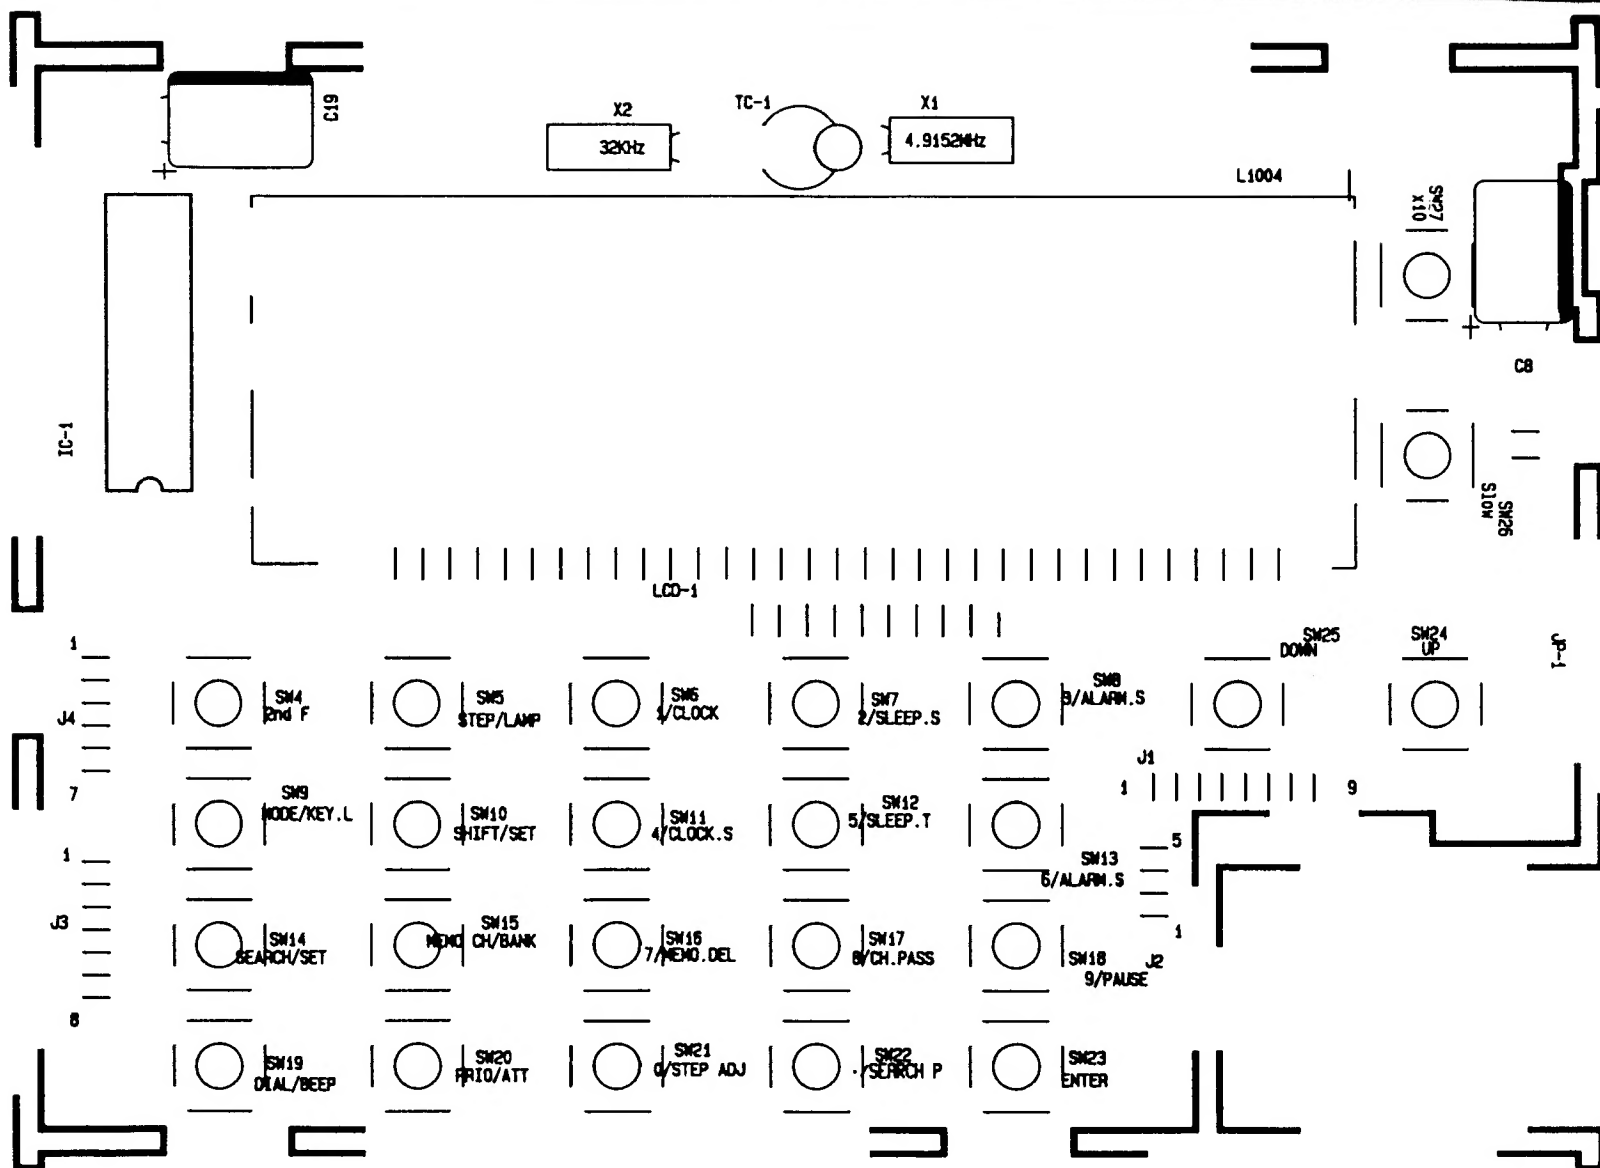

CPU/LCD UNIT PARTS LAYOUT

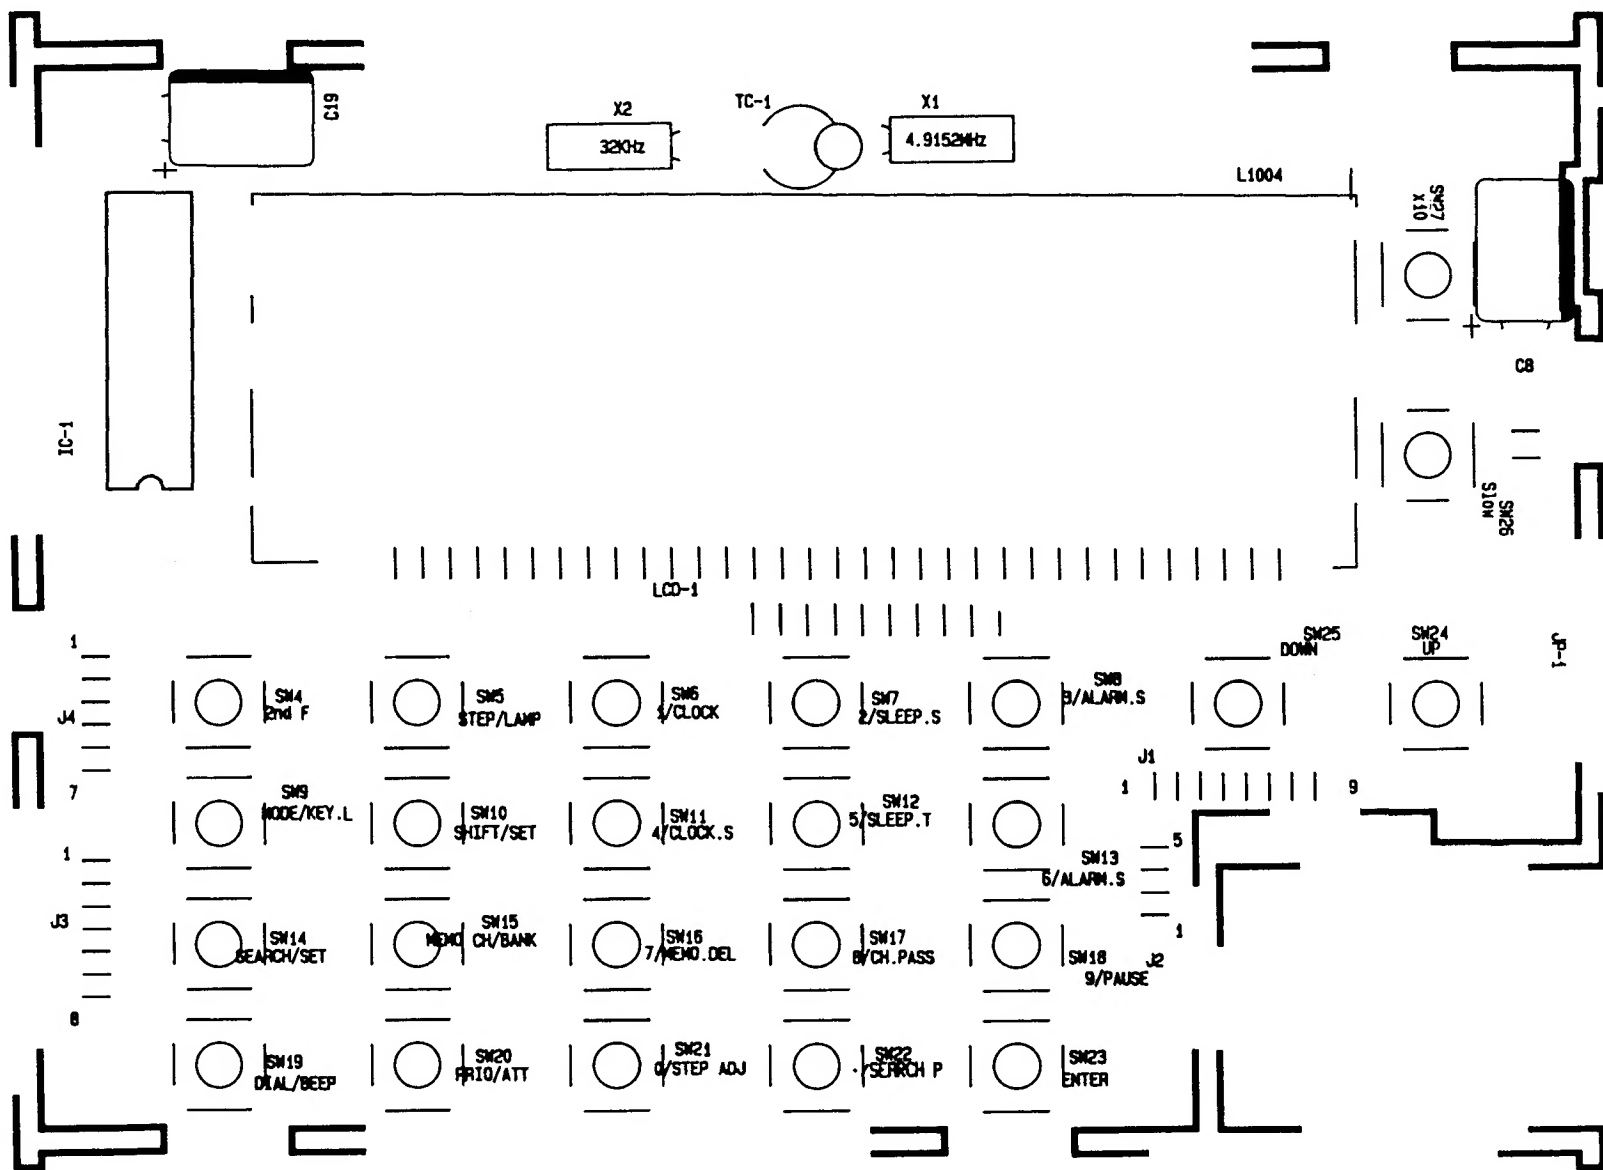

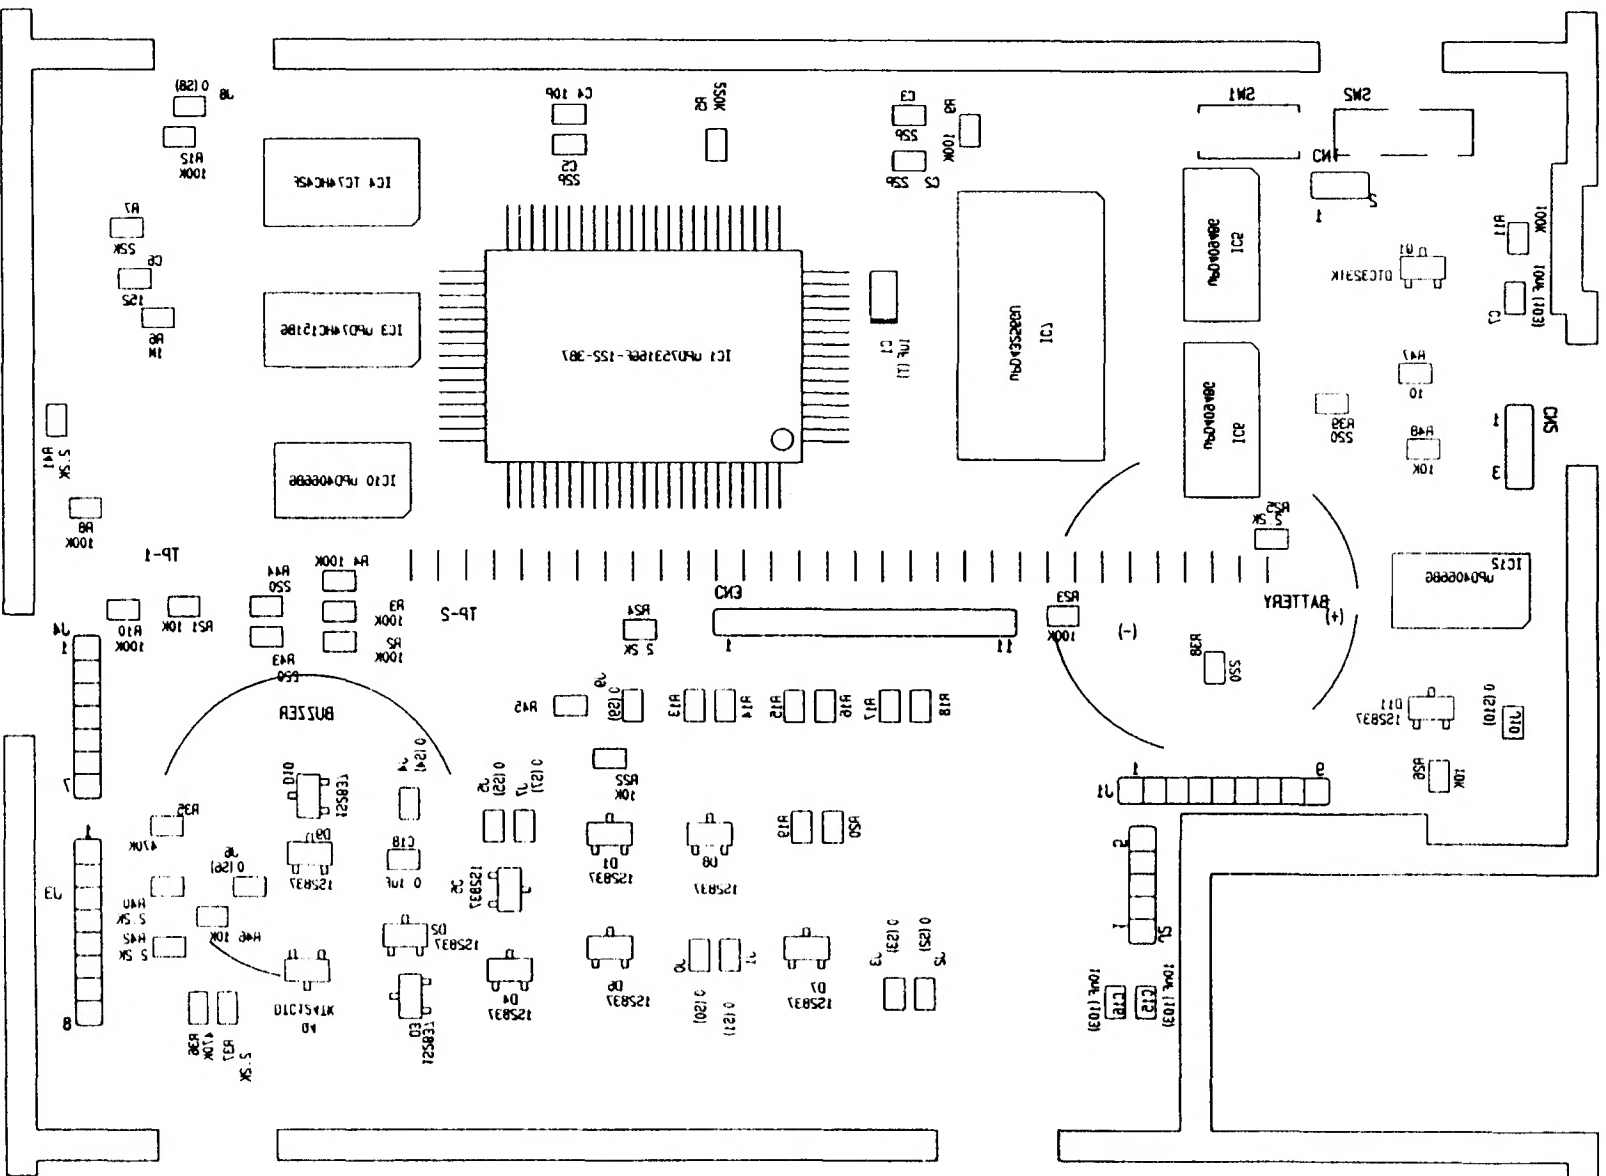

CPU/LCD UNIT SMD COMPONENTS



AOR, LTD.

2-6-4 Misuji, Taito-ku, Tokyo 111

Tel. 03-3865-1681
